

ViPlex Express

Display Content Publishing Management System for PC

V2.8.1



Async Mode User Manual

Contents

Contents	i
1 Software Introduction	1
2 Getting Started.....	2
2.1 Preparing a PC.....	2
2.2 Installing Software	2
2.3 Selecting Working Mode.....	2
2.4 Connecting to Displays.....	3
2.5 Logging In to Terminals	3
2.6 Creating Solutions	5
2.7 Publishing Solutions	6
2.8 Controlling Terminals	6
3 Solution Management.....	7
3.1 Creating Solutions	7
3.1.1 Creating a Regular-Screen Solution	7
3.1.2 Creating an Ultra-Long-Screen Solution	10
3.2 Scheduling Solutions	14
3.3 Publishing Solutions	16
3.4 USB Playback	17
3.5 Exporting/Importing Solutions.....	18
4 Terminal Control.....	20
4.1 Playback Management.....	22
4.1.1 Adjusting Volume in Real Time	22
4.1.2 Managing Terminal Solutions.....	22
4.2 Brightness Adjustment.....	23
4.2.1 Manual Adjustment	24
4.2.2 Smart Adjustment	24
4.3 Video Source	26
4.3.1 Video Source Parameter Configuration	26
4.3.2 Manual Switching.....	27
4.3.3 Scheduled Switching	27
4.3.4 HDMI Preferred.....	28
4.4 Screen Status Control	28
4.4.1 Manual Control	28
4.4.2 Timing Control.....	29
4.5 Time Synchronization	29
4.5.1 Manual Time Synchronization.....	30
4.5.2 GPS Time Synchronization.....	30

4.5.3 NTP Time Synchronization	31
4.5.4 RF Time Synchronization.....	32
4.6 Restart Configuration.....	34
4.6.1 Restarting Immediately	34
4.6.2 Scheduled Restart	34
4.7 Color Temperature.....	35
4.8 Monitoring.....	35
4.9 Play Logs.....	36
4.9.1 Querying Play Logs	36
4.9.2 Exporting Play Logs.....	36
4.10 Font Management	36
4.10.1 Adding Fonts.....	36
4.10.2 Deleting Fonts.....	37
4.11 Network Configuration	39
4.11.1 Configuring Wired Network	39
4.11.2 Configuring Wi-Fi AP.....	40
4.11.3 Configuring Wi-Fi Sta.....	41
4.11.4 Switching Wi-Fi Mode	42
4.11.5 Configuring Mobile Network.....	45
4.11.6 Configuring Network Detection	45
4.12 Server Configuration.....	46
4.12.1 Binding to VNNOX Standard/AD.....	46
4.12.2 Binding to iCare	47
4.13 Terminal Upgrade	47
4.13.1 Online Upgrade.....	47
4.13.2 Local Upgrade	48
4.14 Power Control.....	48
4.14.1 Configuring Power Tags.....	48
4.14.2 Controlling Power Manually	49
4.14.3 Controlling Power as Scheduled.....	49
4.15 RF Management.....	50
4.16 Sensor	50
4.17 Screen Information	51
5 System Settings.....	53
6 Audio and Video Decoder Specifications	54
6.1 Image	54
6.2 Audio	54
6.3 Video	55
7 Limitations on Cut-to-Display Windows for Regular Screens.....	55
8 Limitations on Playback Parameters for Ultra-long Screens	56

1 Software Introduction

ViPlex Express is a display content publishing management system for PC, which is installed in the Windows operating system and allows you to edit solutions and play the solutions on LCD or LED displays. In async mode, ViPlex Express is also used to control multimedia players. This document introduces you to the functions and operations in async mode.

Two Working Modes

ViPlex Express has two working modes and you can switch to your desired mode based on the application scenario.

+ **Studio Mode**

When a solution is being played in ViPlex Express, the solution is also played synchronously on the display. This mode is applicable to synchronous playback.

The playback window is on the extended display. You can use the screen monitoring function to view the playback on your primary monitor.

+ **Async Mode**

ViPlex Express sends solutions to multimedia players. The solutions will be stored in the multimedia players and played according to their playback plans. This mode is applicable to the scenario when multimedia players load displays.

Professional Solution Editing

ViPlex Express is designed with a professional solution editing function allowing you to edit solutions with various contents and complex schedules as required.

+ **Multiple pages**

A solution can be added with multiple pages that are played in order from top to bottom.

+ **Flexible layout**

You can use a system template or customize a template when adding a page. In a template, you can set the number, coordinates, width, and height of windows based on your needs.

+ **A variety of media**

On a page, you can add general windows, cut-to-display window, Office documents, images, videos, GIF, text, colorful text, digital clocks, analog clocks, timers, weather, RSS, streaming media and web pages.

+ **Multiple properties**

Every type of media has multiple properties that can satisfy your needs and present a variety of solutions.

+ **Scheduling as you wish**

You can set a timeslot and cycle for each page to play. The schedules of a page can be batch applied to other pages. If the timeslots of several pages overlap, the pages will be played in order from top to bottom.

+ **Quick preview**

Clicking the preview button allows you to preview the current page. The preview window refreshes immediately when you move on to another page.

All-round Terminal Control

In async mode, ViPlex Express enables you to fully control multimedia players, such as brightness adjustment, time synchronization, font management, terminal upgrade, video source switching, screen status control, play log query, network configuration, and RF management.

2 Getting Started

2.1 Preparing a PC

Minimum requirements:

- OS: Windows 7 SP1 64-bit
- CPU: i5
- RAM: 4 GB
- HDD: 60 GB

2.2 Installing Software

Prerequisites

- Framework 4.6.x is installed.
- The official version of Visual C++ 2017 runtime components are installed.
- The installation package of ViPlex Express is obtained.

Where to Obtain

<http://www.en.vnnox.com/download>

Operating Procedure


Double click the installer and install ViPlex Express according to the setup wizard.

2.3 Selecting Working Mode

First Installation

After ViPlex Express is first installed, a **Select Mode** dialog box appears when you open ViPlex Express. Select **Studio Mode** and click **Open**.

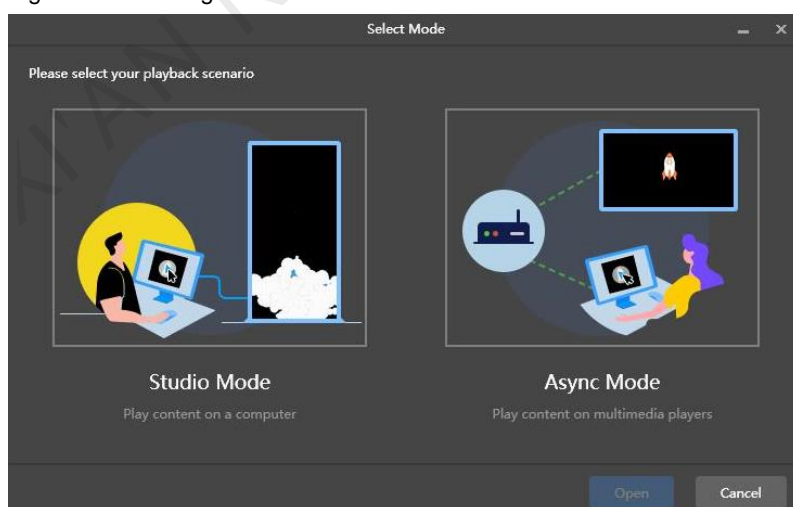Figure 2-1 Selecting a mode



Other Situations


If you have installed ViPlex Express or selected a working mode before, the dialog box shown in [Figure 2-1](#) will not appear. If ViPlex Express is in studio mode by default after opened, switch to the async mode by following the steps below:

In the top-right corner, choose  > **Working Mode** > **Async Mode** and click **OK**. ViPlex Express will be in async mode after a restart.

2.4 Connecting to Displays

[Figure 2-2](#) and [Figure 2-3](#) use the TB6 Taurus series multimedia player as an example to show the connection.

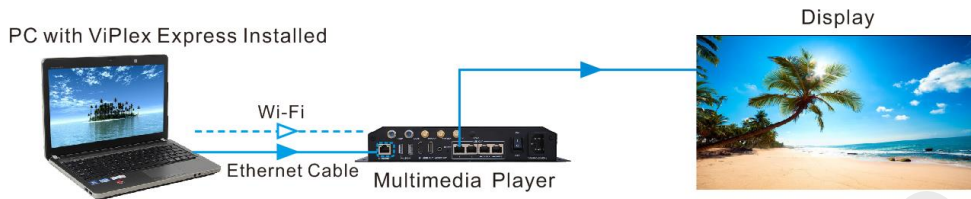Figure 2-2 Ethernet cable



+ Ethernet cable

The PC with ViPlex Express installed is connected to multimedia players via Ethernet cable.

The DHCP of multimedia players is enabled, the DHCP in the top-left corner of ViPlex Express is turned on. Select a local IP address and click **OK**. ViPlex Express will automatically connect to the Taurus. If the connection is not stable, set a static IP address for the PC.


Note: Before enabling the DHCP service, turn off the firewall of the PC or set the ICMP echo reply policy.

+ Wi-Fi

The PC with ViPlex Express installed is connected to multimedia players via Wi-Fi.

When the multimedia player has a built-in Wi-Fi AP, you can use this method without the need for configuration. For instance, when the multimedia player has a built-in Wi-Fi AP, the default SSID is "AP+*Last 8 digits of the SN*" and the default password is "12345678".

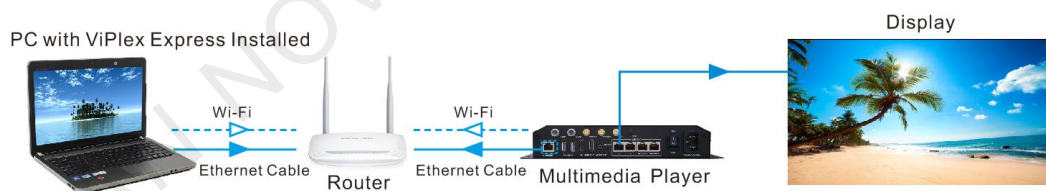Figure 2-3 LAN



+ Wired LAN

The PC with ViPlex Express installed and multimedia players connected to the same wired LAN via Ethernet cable.

If this method is used, the configuration is not required.

+ Wireless LAN

The PC with ViPlex Express installed and multimedia players connected to the same wireless LAN via Wi-Fi.

This method is available when multimedia players support Wi-Fi Sta. The DHCP of multimedia players is enabled. Log in to multimedia players with ViPlex Express and connect to the Wi-Fi AP of the router on the network configuration page.

2.5 Logging In to Terminals

After you select async mode, the terminal management page of async mode will be displayed.


Required Information

Login user name and password of the multimedia player, for example, the default login user name and password of the Taurus series multimedia players are "admin" and "123456", respectively.


Logging In to Terminals




Step 1 Click **Refresh** to refresh the screen list.

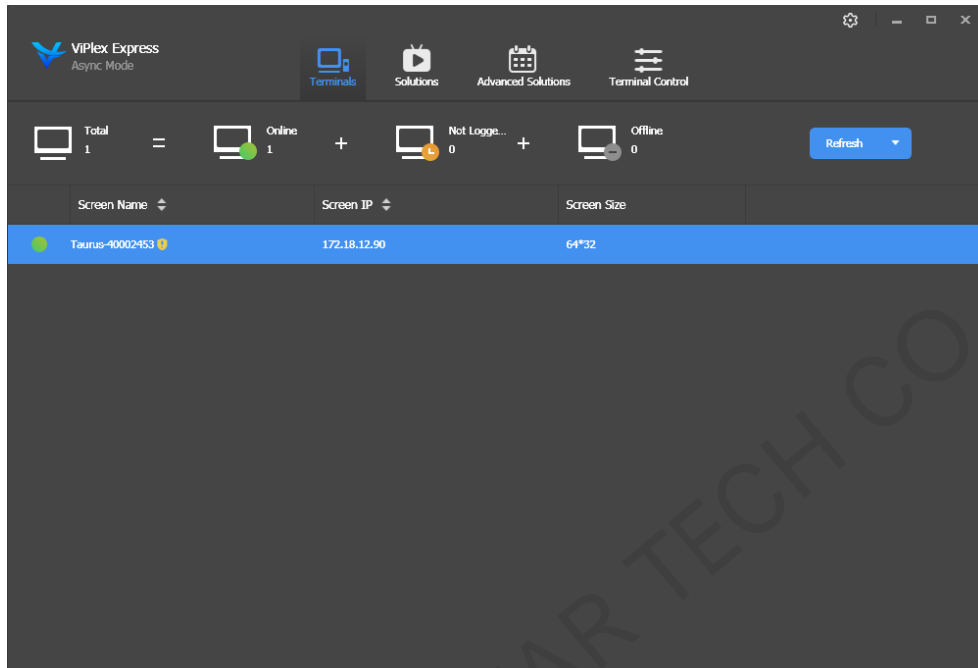Figure 2-4 Terminal management



After detecting a terminal, ViPlex Express will try to log in to the terminal with the default account or the account used for the last login.

If terminals and ViPlex Express are not on the same network segment and can be pinged. Click  next to **Refresh**, select **Specify IP** and enter an IP address or IP range to connect to terminals manually.


-  : Denotes that the terminal is online and you can log in to it. Go to [Step 2](#).
-  : Denotes the terminal is offline and you cannot log in to it.
-  : Denotes you have successfully logged into the terminal.

Step 2 Click **Connect** next to screen information.

Step 3 Enter the password for the "admin" user and then click **OK**.

After successful login, ViPlex Express saves the account information automatically.

Related Operations

After successful login, if the password is verified as a weak password,  will be displayed next to the terminal name. You are advised to change the password to a complex one to enhance security.

Right-click the screen information, and the related operations will be displayed:


- Log Out: Log out of the terminal.
- Rename: Rename the terminal.
- Change Password: Change the connection password of the Taurus Wi-Fi AP and the login password of the "admin" user.
- Forget Password: Delete the password saved during the last login.
- Download Operation Log: Download the operation logs of asynchronous terminals.

2.6 Creating Solutions

After updated, the solution data in async mode will be synchronized to studio mode.

Step 1 Choose **Solutions** to access the solution management page.

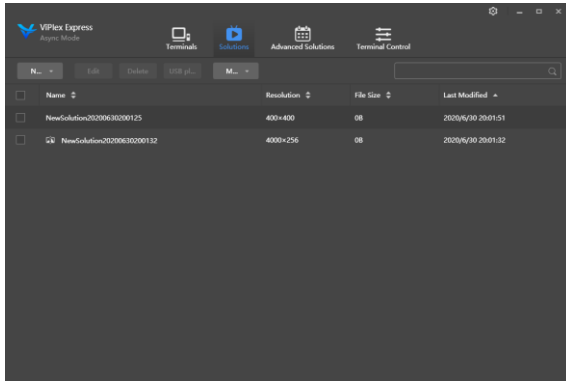Figure 2-5 Solution management



Step 2 Click **New** and select **Regular Screen** or **Ultra-Long Screen** from the drop-down menu.

The **Solution** Information dialog box appears.

Figure 2-6 Solution information for a regular screen


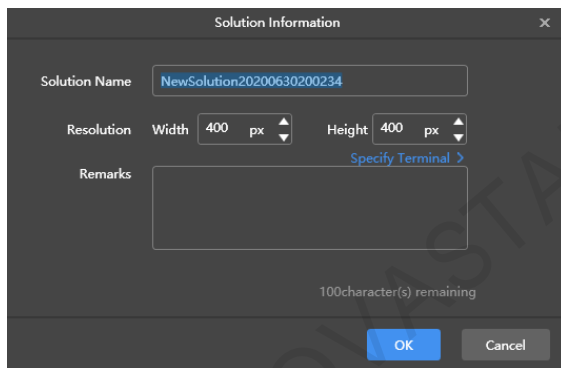


Figure 2-7 Solution information for an ultra-long screen

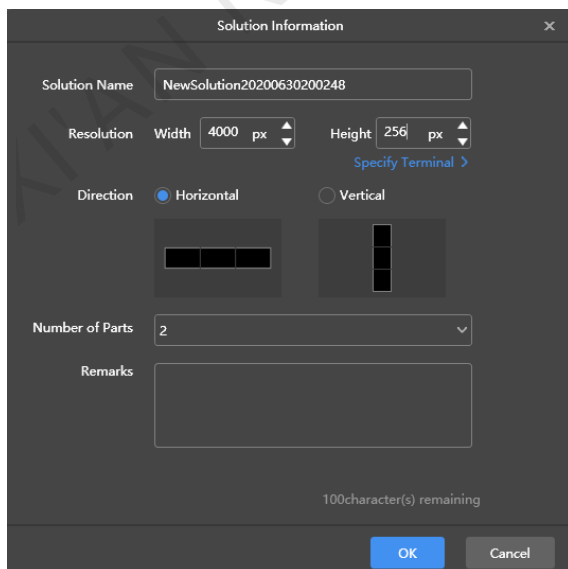



Step 3 Set a name, resolution, and other information for the solution, then click **OK** to access the solution editing page.

- The resolution of a solution for a regular screen (hereinafter referred to as "regular-screen solution") must be consistent with the resolution of the screen.
- The resolution of a solution for an ultra-long screen (hereinafter referred to as "ultra-long-screen solution") must be consistent with the configured screen width and height.

Step 4 After the solution editing is done, click **Save**.

Step 5 (Optional) At the upper right of the page, click  to view the schedule of each page in the solution.

Step 6 (Optional) At the upper right of the page, click  to preview the current page.


When the preview window is opened, you can also select other pages to preview. If you make changes to the current page, click  to refresh the preview window.

Step 7 After the solution editing is done, click **Publish** and select players to publish the solution.

2.7 Publishing Solutions


Solutions containing media can be published.

Step 1 Choose **Solutions**.

Step 2 In the solution list, move your mouse over a solution and click .

The **Publish** dialog box appears.

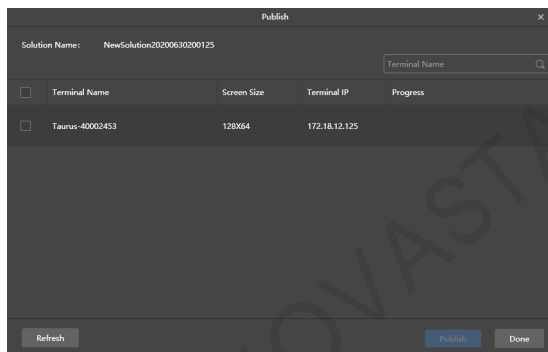Figure 2-8 Publishing a solution



Step 3 Click **Refresh** to display all the terminals that are logged in.

Note: During solution publishing, ViPlex Express automatically converts the video formats that are not supported by the terminal.

Step 4 Select one or more terminals and click **Publish**.

Step 5 After the solution is published successfully, click **Done**.

2.8 Controlling Terminals

Users can control the brightness, display status, video source switching, etc. of a terminal in real time or as scheduled. For details, see [4 Terminal Control](#).

3 Solution Management

3.1 Creating Solutions

- For different screens, you can create regular-screen solutions and ultra-long-screen solutions.
- After updated, the solution data in async mode will be synchronized to studio mode.

3.1.1 Creating a Regular-Screen Solution

Related Information


- A regular-screen solution contains one or more pages and each page contains one or more media items.
- The pages of a solution are played in order from top to bottom.

Operating Procedure

Before you create a solution, get the screen resolution in advance.

Step 1 Choose **Solutions** to access the solution management page.

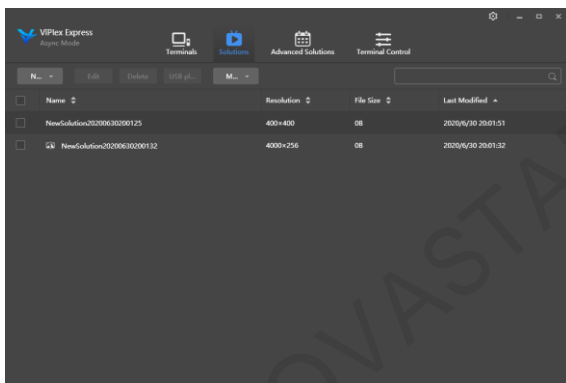
Figure 3-1 Solution management



Step 2 Click **New** and select **Regular Screen** from the drop-down menu.

The **Solution Information** dialog box appears.

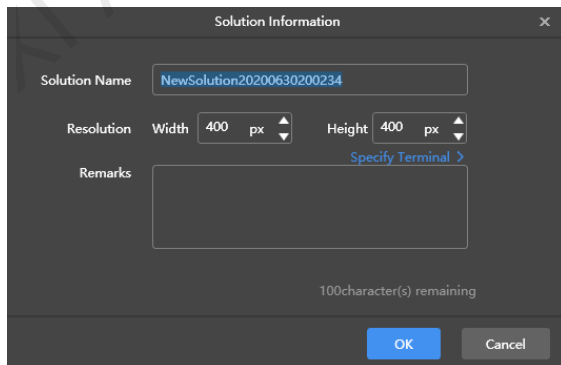
Figure 3-2 Solution information



Step 3 Set a name and resolution for the solution, then click **OK** to access the solution editing page, as shown in [Figure 3-2](#).

You can also set a resolution by clicking **Specify Terminal** and the resolution will be the same as the resolution of the terminal you select.



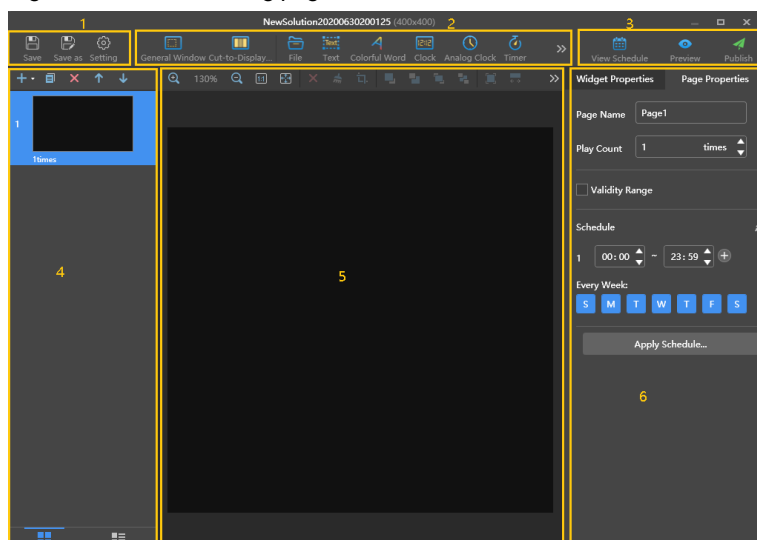















Figure 3-3 Solution editing page



The description of the solution editing page is shown in Table 3-1.

Table 3-1 Description of the solution editing page

No.	Function	Description	
1	Saving a solution, saving a solution as another solution and setting solution information	Used for saving a solution, saving a solution as another solution and setting solution information	
2	Adding media You can click an icon to add a corresponding media item.	: General window	: Cut-to-display window
		: File	: Text
		: Colorful text	: Digital clock
		: Analog clock	: Timer
		: Weather	: Environment monitoring
		: RSS	: Streaming media
		: Web page	
3	Viewing schedules, previewing pages and publishing solutions	Used for viewing schedules, previewing the current page and publishing solutions	
4	Editing solution pages You can add, copy, and delete pages and adjust the order of pages. Pages are played in order from top to bottom.	: Add	: Open the Page Template dialog box
		: Copy	: Delete
		: Move up	: Move down
		: Thumbnail view (Only the thumbnails of pages are displayed.)	: List view: (The thumbnails of pages and the names of the media items contained in the currently selected page are displayed.)
5	Editing media on pages	: Zoom editing area in	: Zoom editing area out


No.	Function	Description
		 : Show the editing area in the original size
		 : Automatically fit the editing area according to the software interface
		 : Delete selected media
		 : Clear all media
		 : Crop image
		 : Bring forward
		 : Send backward
		 : Bring to front
		 : Send to back
		 : Fill the entire screen
		 : Fit the screen horizontally
		 : Fit the screen vertically
		 : Align top
		 : Center vertically
		 : Align bottom
		 : Align left
		 : Center horizontally
		 : Align right
6	Editing properties	<p>Used for editing widget and page properties</p> <ul style="list-style-type: none"> • Widget Properties: Widgets are the media added to a page. The properties of different types of media vary. Click a widget to select it before you edit its properties. • Page Properties: Set the name, play count, validity range, and playback schedule of a page. <ul style="list-style-type: none"> – Play Count: Set the number of times to play a page continuously. – Validity Range: After this option is selected, the Start Date and End Date parameters are displayed. Expired pages will be skipped during solution playback. – Schedule: Allows you to specify the timeslots to play a page and select the days to repeat the playback. If the timeslots of different pages overlap, the pages will be played in order from top to bottom. – Apply Schedule: Allows you to apply the schedule of the current page to other pages. You can select multiple pages and apply a schedule to them at the same time.


Notes

- When you add an Excel file, the number of rows of the Excel file must be less than or equal to 600 and the total width of the columns must be less than or equal to the width of an A4 landscape paper. It is recommended that you set the page layout of the Excel file to A4 landscape.
- A valid URL is required when you add RSS, streaming media, or web page media.
- When you add weather media, the terminal must be connected to the Internet so that it can obtain real-time weather information.
- When you add environment monitoring media, connect to the sensor logically in ViPlex Express after the sensor is connected to the terminal. For details, see [4.16 Sensor](#).
- For the limitations on cut-to-display windows, see [7 Limitations on Cut-to-Display Windows for Regular Screens](#).

Step 4 After the solution editing is done, click **Save**.

Step 5 (Optional) At the upper right of the page, click  to view the schedule of each page in the solution.

Step 6 (Optional) At the upper right of the page, click  to preview the current page.

When the preview window is opened, you can also select other pages to preview. If you make changes to the current page, click  to refresh the preview window.

Step 7 After the solution editing is done, click **Publish** and select players to publish the solution.

3.1.2 Creating an Ultra-Long-Screen Solution

Applications

If the pixel width of the resolution of a screen is greater than the pixel width of the maximum loading capacity of a multimedia player or the pixel height of the resolution of a screen is greater than the pixel height of the maximum loading capacity of a multimedia player, but the screen resolution does not exceed the maximum loading capacity of the multimedia player, you can use ultra-long-screen solutions.

Note:

For the limitations on the playback parameter specifications for ultra-long screens, see [8 Limitations on Playback Parameters for Ultra-long Screens](#).

Application Example

The resolution of a screen is 9000×128 or 128×9000 and the maximum loading capacity of a TB8 multimedia player is 2,300,000 pixels with a maximum width of 4096 pixels and a maximum height of 1920 pixels.

Screen Configuration

The screen width and height to be configured cannot exceed the maximum width and height of the loading capacity of the TB8, as shown in [Figure 3-4](#) and [Figure 3-5](#).

Ultra-wide screen (9000×128)

- Number of parts: $9000/4096=2.20$ (Here an integer is required, so the number of parts is 3.)
- Screen width to be configured: $9000/3=3000$
- Screen height to be configured: $128 \times 3=384$

Ultra-tall screen (128×9000)

- Number of parts: $9000/1920=4.69$ (Here an integer is required, so the number of parts is 5.)
- Screen width to be configured: $128 \times 5=640$
- Screen height to be configured: $128 \times 2=256$ Screen height to be configured: $9000/5=1800$

Figure 3-4 Ultra-wide screen configuration


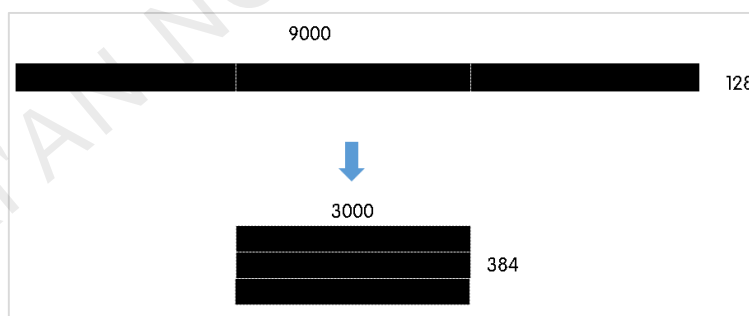


Figure 3-5 Ultra-tall screen configuration

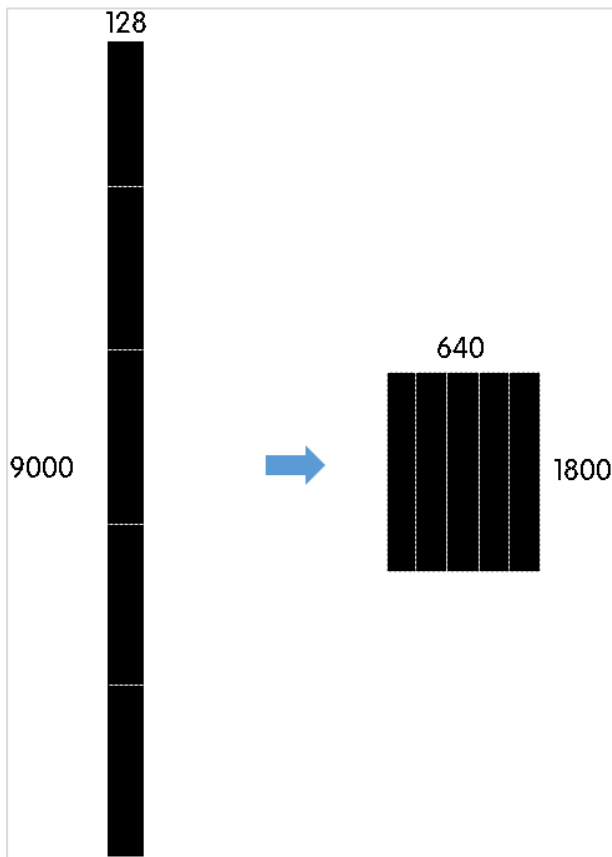

When you set the connection of receiving cards and an Ethernet port loads two rows/columns or more, the connection must follow the shape of the letter Z, as shown in [Figure 3-6](#) and [Figure 3-7](#).

Figure 3-6 Ultra-wide screen connection


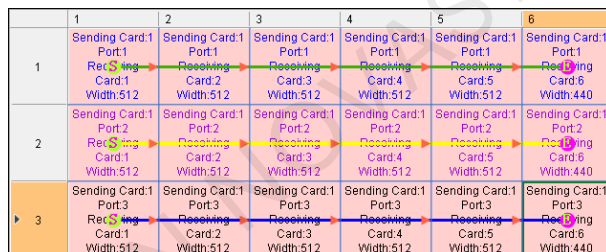


Figure 3-7 Ultra-tall screen connection

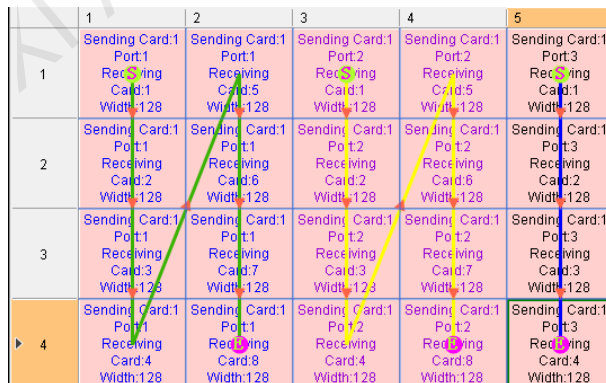

If you want to set receiving cards to blank, you can only set the receiving cards at both ends to blank, as shown in [Figure 3-8](#) and [Figure 3-9](#).

Figure 3-8 Blank receiving cards of an ultra-wide screen


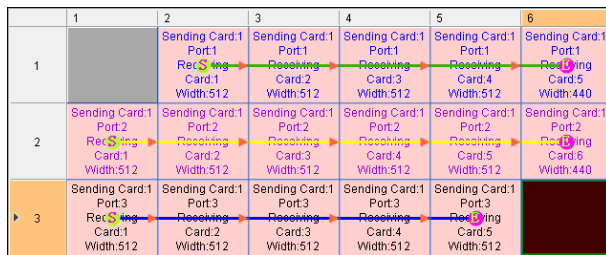


Figure 3-9 Blank receiving cards of an ultra-tall screen

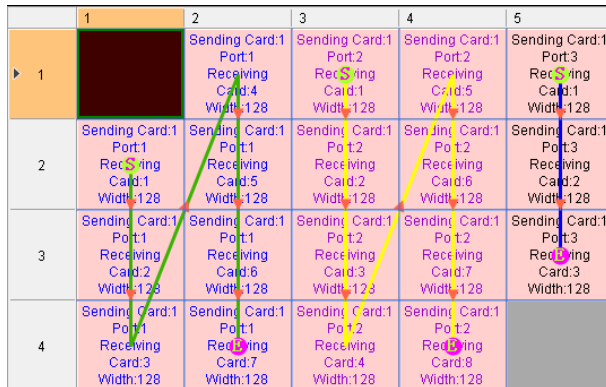


Operating Procedure

The preceding application will be used as an example to introduce how to create an ultra-long-screen solution.

Step 1 Choose **Solutions** to access the solution management page.

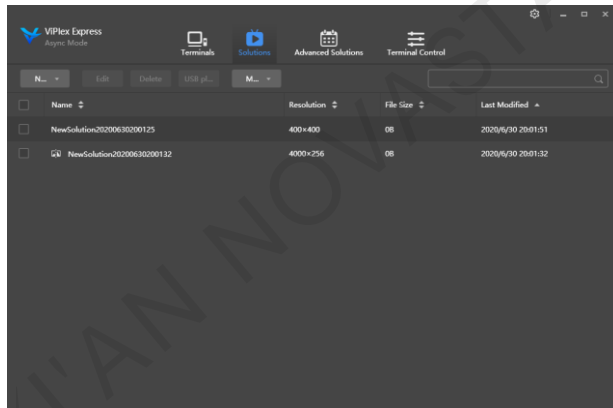Figure 3-10 Solution information



Step 2 Click **New** and select **Ultra-Long Screen** from the drop-down menu.

The **Solution Information** dialog box appears.

Figure 3-11 Solution information of an ultra-wide screen

Figure 3-12 Solution information of an ultra-tall screen


Step 3 Set a name, resolution, direction and the number of parts for the solution, then click **OK**.

- The resolution of the solution must be consistent with the configured screen width and height.
Here the width of the ultra-wide screen is 3000 and its height is 384, and the width of the ultra-tall screen is 640 and its height is 1800. For details, see the preceding [Screen Configuration](#).
- Set the direction according to the actual situation, For an ultra-wide screen, select **Horizontal**, while for an ultra-tall screen, select **Vertical**.
Here the direction is **Horizontal**.
- The number of parts is calculated according to the actual screen width and height and the configured screen width and height.
Here the number of parts of the ultra-wide screen is 3 and the number of parts of the ultra-tall screen is 5. For details, see [Screen Configuration](#).

Step 4 Edit the solution on the solution editing page, as shown in [Figure 3-13](#).


- In the page media editing area, the page is displayed based on the actual screen resolution and the boundaries appear according to the number of parts.
- Only images, text and colorful text can be placed across the boundary.

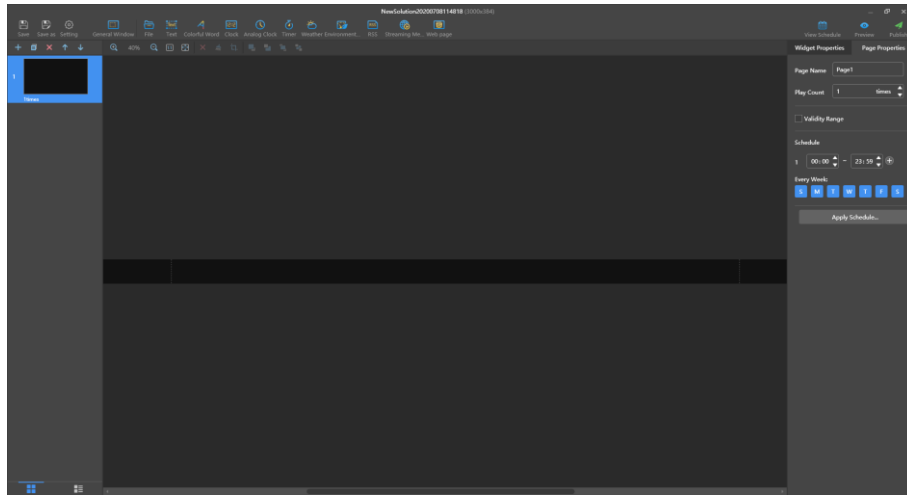Figure 3-13 Ultra-long-screen solution editing page



Step 5 After the solution editing is done, click **Save**.

Step 6 (Optional) At the upper right of the page, click  to view the schedule of each page in the solution.

Step 7 (Optional) At the upper right of the page, click  to preview the current page.

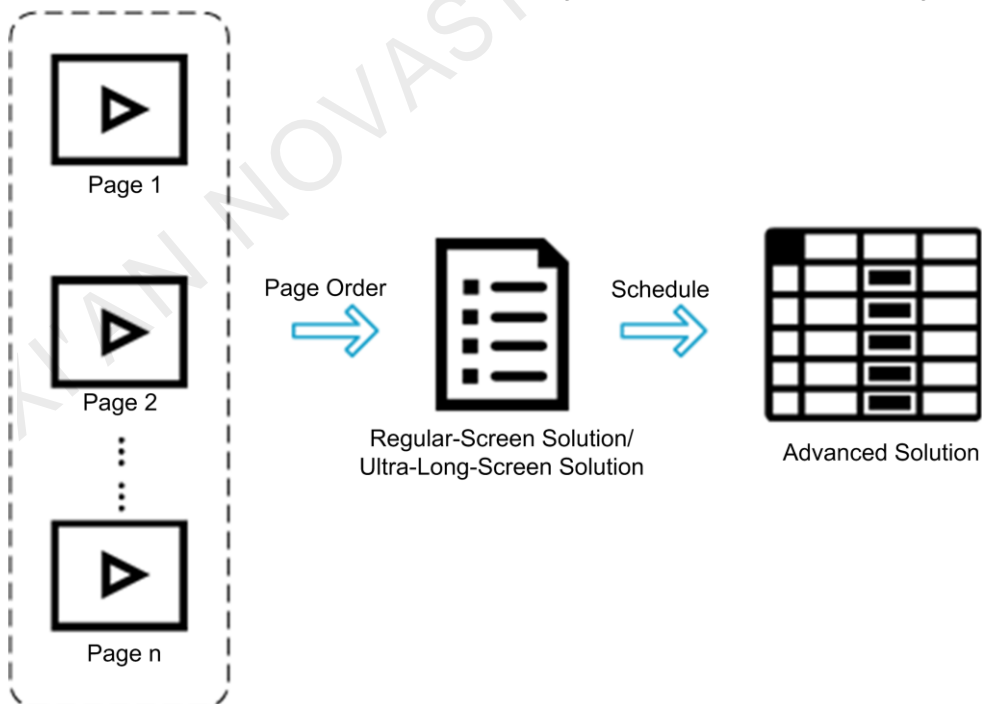
The preview window is displayed based on the configured screen aspect ratio.

Step 8 After the solution editing is done, click **Publish** and select players to publish the solution.

3.2 Scheduling Solutions

Applications


An advanced solution is a collection of scheduled regular-screen solutions or ultra-long-screen solutions.



Operating Procedure


Step 1 Choose **Advanced Solutions** to access the advanced solutions page.

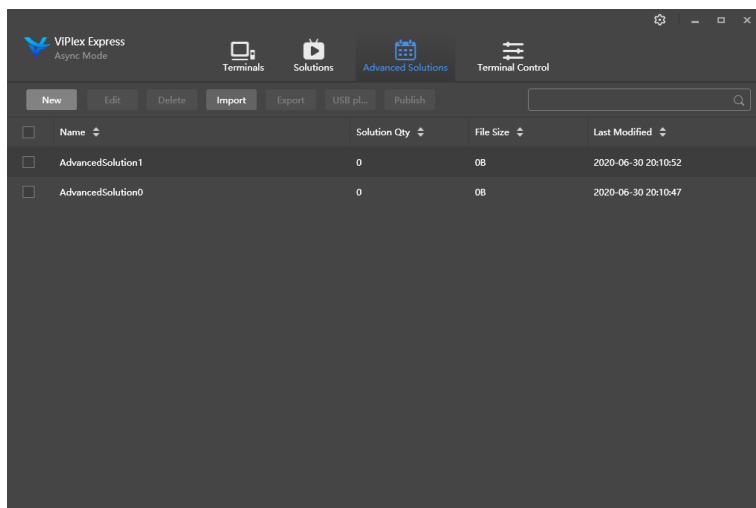Figure 3-14 Advanced solutions



Step 2 Click **New** to open the **New Advanced Solution** page.

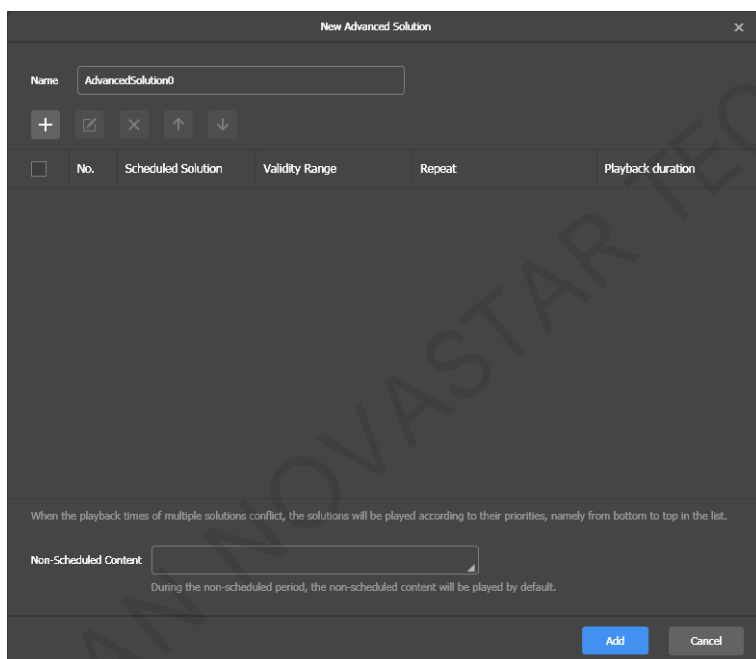Figure 3-15 New advanced solution



Step 3 Enter a name for the advanced solution.

Step 4 Click .

Figure 3-16 Adding playback plan

Step 5 Select a solution and set its validity range, repeat method, and playback durations.

Step 6 Click **Add**.

Step 7 Repeat [Step 5](#) and [Step 6](#) to add more solutions.

Step 8 After solutions are added, click **Cancel**.

Step 9 (Optional) Click the box next to **Non-Scheduled Content**, select a solution and click **OK**.

The non-scheduled content will be played by default during the non-scheduled period.

Figure 3-17 Adding non-scheduled content

<input type="checkbox"/>	No.	Scheduled Solution	Validity Range	Repeat	Playback duration
<input type="checkbox"/>	1	NewSolution2020063...	Never expires	Every day	00:00:00-23:59:59
<input type="checkbox"/>	2	NewSolution2020063...	Never expires	Every day	00:00:00-23:59:59

When the playback times of multiple solutions conflict, the solutions will be played according to their priorities, namely from bottom to top in the list.

Non-Scheduled Content

During the non-scheduled period, the non-scheduled content will be played by default.

Step 10 Click **Add**.

3.3 Publishing Solutions

Applications


Send regular-screen solutions, ultra-long-screen solutions and scheduled advanced solutions to terminals.
www.novastar.tech

Related Information

- A solution containing media can be published.
- Only one solution can be sent to a terminal each time.
- A solution can be sent to multiple terminals.


Operating Procedure

Step 1 Choose **Solutions** or **Advanced Solutions**.

Step 2 In the solution list, move your mouse over a solution and click .

The **Publish** dialog box appears.

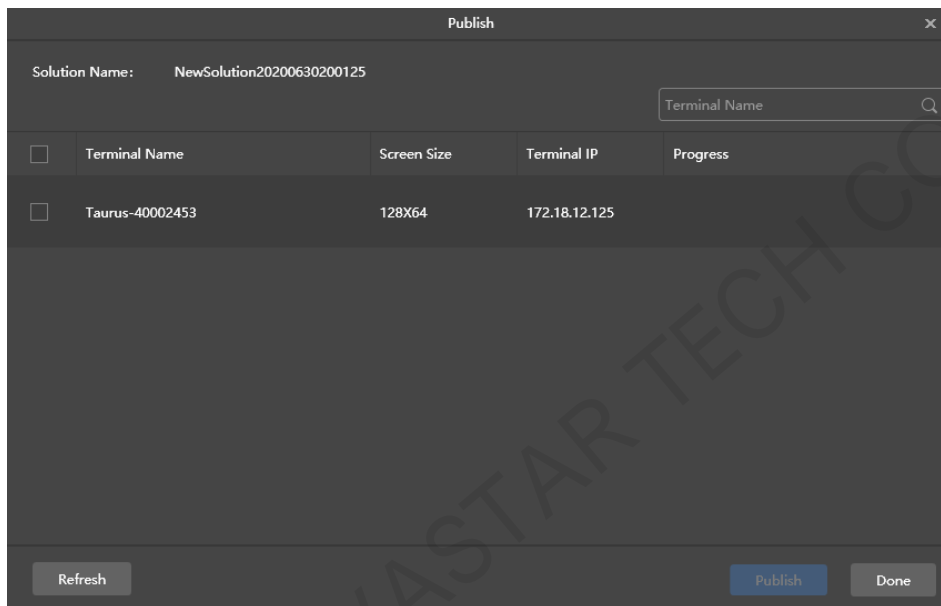Figure 3-18 Publishing a solution



Step 3 Click **Refresh** to display all the terminals that are logged in.

Note: During solution publishing, ViPlex Express automatically converts the video formats that are not supported by the terminal.

Step 4 Select one or more terminals and click **Publish**.

Step 5 After the solution is published successfully, click **Done**.

3.4 USB Playback

Applications


When a multimedia player can play solutions imported from a USB drive, users can import solutions to a USB drive by using the USB playback function in ViPlex Express and then insert the USB drive into the multimedia player to enable solution playback.

Related Information

- A solution containing media supports USB playback.
 - Multiple solutions can be exported to a USB drive each time.
- During USB playback, the specified solution is played by default.


Operating Procedure

Step 1 Choose **Solutions** or **Advanced Solutions**.

Step 2 In the solution list, move your mouse over a solution and click , or select one or more solutions and click **USB Playback**.

The USB playback dialog box appears.

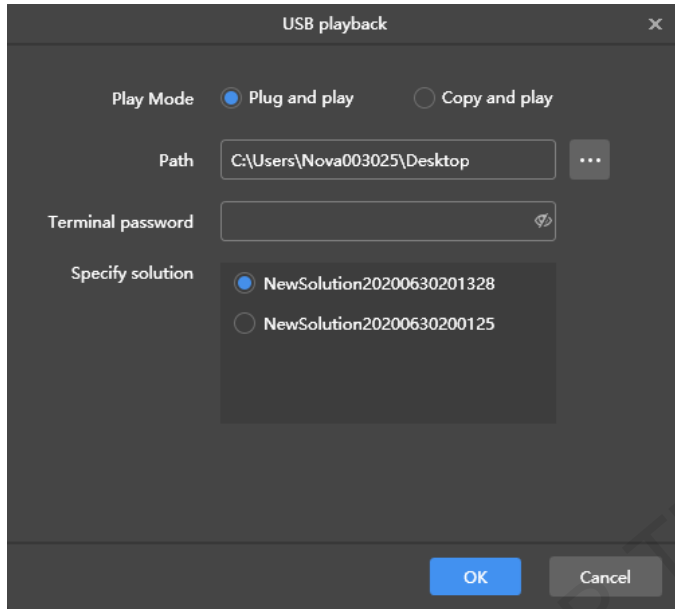Figure 3-19 USB playback



Step 3 Specify a playback mode.

- Plug and play: The solution starts to play as soon as you insert the USB drive where the solution is stored in the terminal. Do NOT remove the USB drive during playback.
- Copy and play: The solution starts to play after the solution in the USB drive is copied to the terminal. Do NOT remove the USB drive during playback.

Step 4 Click  to choose a location to store the solutions to be exported.

Step 5 Enter the connection password of the terminal.

After the USB drive where solutions are stored is inserted into the terminal, the solutions can be played only when the password is correct.

Step 6 Select a solution and click **OK**.

Step 7 After solutions are exported successfully, click **Done**.

3.5 Exporting/Importing Solutions

Applications

Transfer solutions by exporting and importing solution files with ViPlex Express.

Related Information


- A solution containing media can be exported.
- Regular-screen solutions, ultra-long-screen solutions and scheduled advanced solutions can be exported and imported.


Operating Procedure

Export solutions

- Step 1 Choose **Solutions** or **Advanced Solutions**.
- Step 2 From the solution list, select one or more solutions and then choose **More > Export**.

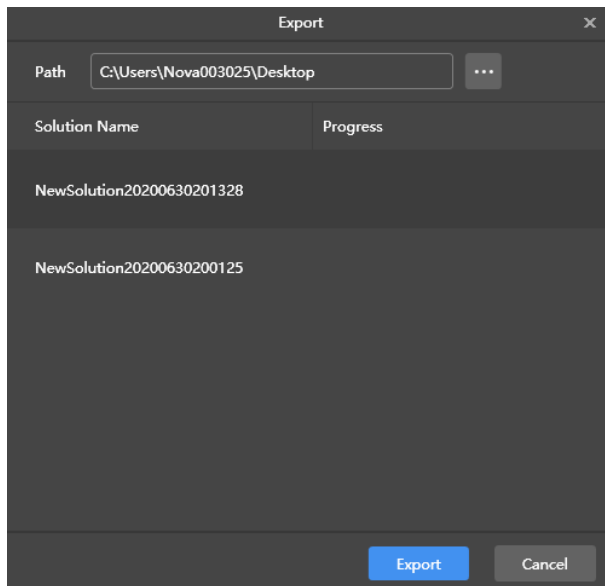Figure 3-20 Exporting solutions



- Step 3 Click  to choose a location to store the solutions to be exported.
- Step 4 Click **Export**.


Note: During solution exporting, ViPlex Express automatically converts the video formats that are not supported by the terminal.


- Step 5 After the solutions are exported successfully, close the dialog box.

Import solutions

- Step 1 From the **Solutions** page, choose **More > Import**.
- Or click **Import** on the **Advanced Solutions** page.

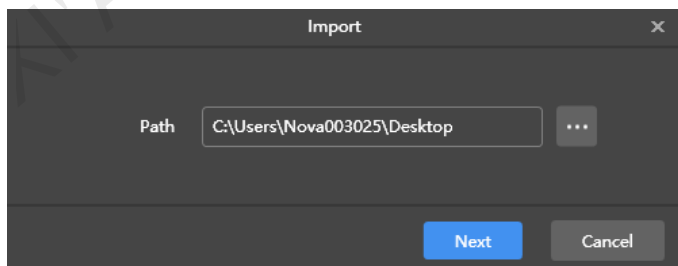Figure 3-21 Importing solutions



- Step 2 Click  to choose the location of the local files.
- Step 3 Click **Next**.
- Step 4 After the solutions are imported successfully, click **Done**.

4 Terminal Control

Function List


Function	Sub-Function	Taurus LED Players	Taurus LCD Players	VPlayer
Playback management	Adjust volume in real time	√	√	
	Manage terminal solutions	√	√	
Brightness adjustment	-	√		
Video source	Configure video source parameters	√		
	Switch video source	√		
Screen status control	-	√		
Time synchronization	Sync time manually	√	√	
	Sync time with NTP	√	√	
	Sync time with RF	√		
Restart configuration	-	√	√	
Color temperature	-	√		
Monitoring	-	√	√ (Available memory usage and CPU usage are not available.)	
Play logs	Query play logs	√	√	
	Export play logs	√	√	
Font management	Add fonts	√	√	
	Delete fonts	√	√	
Network configuration	Configure wired network	√	√	
	Configure Wi-Fi AP	√	√	
	Configure Wi-Fi Sta	√		
	Configure mobile network	√	√	
	Configure network detection	√	√	
Server configuration	Bind to VNNOX Standard/AD	√	√	
	Bind to iCare	√		

Function	Sub-Function	Taurus LED Players	Taurus LCD Players	VPlayer
Terminal upgrade	Online upgrade	√	√	√
	Local upgrade	√	√	√
Power control	-	√	√ (No support for multi-function card power)	
RF management	-	√		
Sensor	-	√		
Screen information	-	√	√	

Common Operations


- Click the **Read back** button to read terminal information back to ViPlex Express and display it.

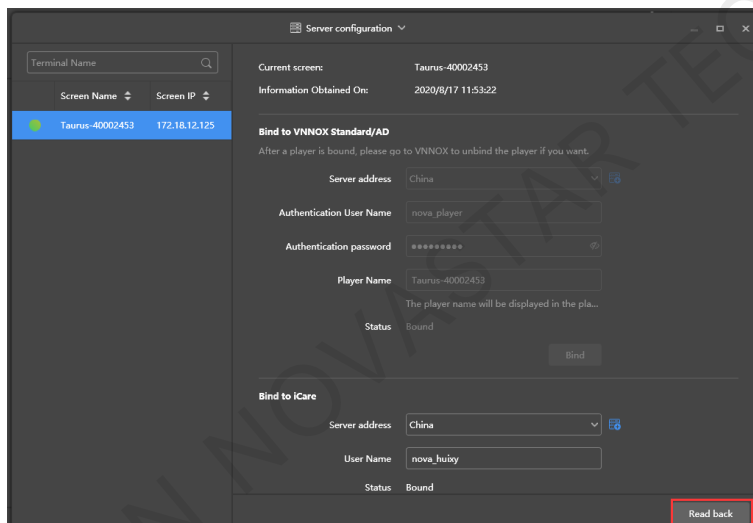Figure 4-1 Readback



- In the terminal list, you can select multiple terminals with the **Ctrl+Shift** keyboard shortcut.
Selecting multiple terminals is not available in **Playback management**, **Video source**, **Network configuration**, **Sensor**, and **Screen information**.

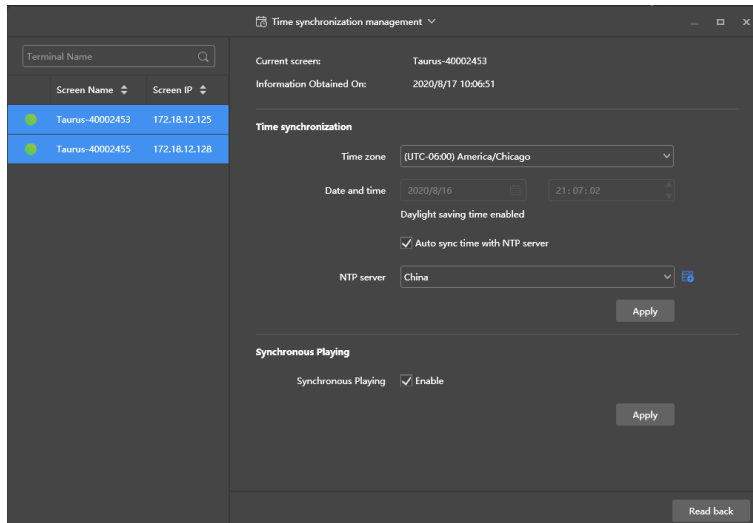Figure 4-2 Selecting multiple terminals



4.1 Playback Management


Manage the playback mode, volume, and content of terminals.

4.1.1 Adjusting Volume in Real Time

- Step 1 Choose **Terminal Control > Playback Management**.
- Step 2 Select the target terminal from the terminal list.
- Step 3 In the **Playback Configuration** area, adjust the volume by dragging the slider or entering a value.

When the information related to RF synchronization is displayed, as shown in [Figure 4-3](#), it indicates that volume synchronization is enabled on the current terminal. See relevant operations in [4.15 RF Management](#). RF synchronization requires you to specify a master device and slave devices. Users only need to set the volume of the master device. The slave devices will keep the same volume as the master device via an RF signal.


Figure 4-3 RF synchronization-volume



4.1.2 Managing Terminal Solutions

- Viewing screenshot: Click **View Screenshot** to view the real-time screenshot of the solution which is being played on the terminal.

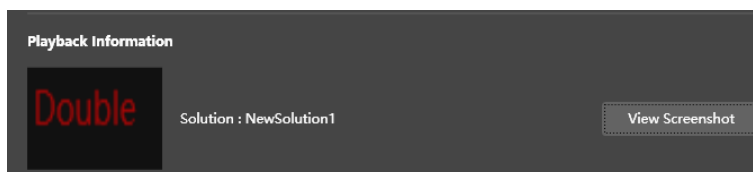Figure 4-4 Viewing the screenshot




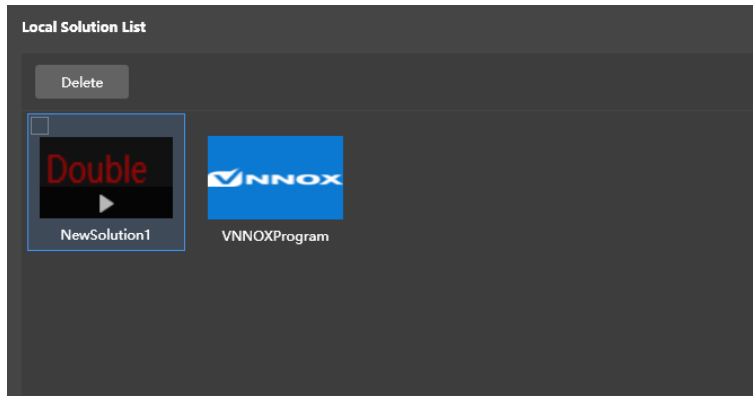
- Playing a solution: Move the mouse to the thumbnail of the solution and click .

Figure 4-5 Solution list




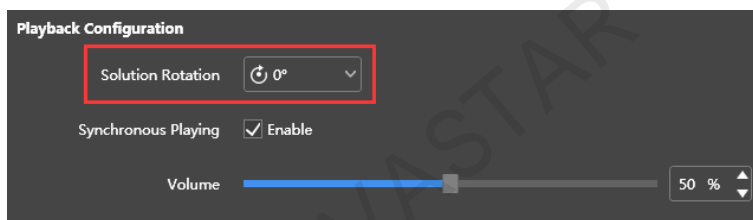
- Stopping playing a solution: Move the mouse to the thumbnail of the solution and click .
- Deleting a solution: Select a solution in the solution thumbnail list and click **Delete**.
- Rotating a solution: Select a rotation angle from the drop-down box next to **Rotation Playback**. The rotation angle is an absolute angle.

Figure 4-6 Solution rotation




4.2 Brightness Adjustment

Manually adjust the brightness or set rules of smart brightness adjustment.

When the information related to RF synchronization is displayed, as shown in [Figure 4-7](#), it indicates that brightness synchronization is enabled on the current terminal. See relevant operations in [4.15 RF Management](#). RF synchronization requires you to specify a master device and slave devices. Users only need to set the brightness of the master device. The slave devices will keep the same brightness as the master device via the RF signal.

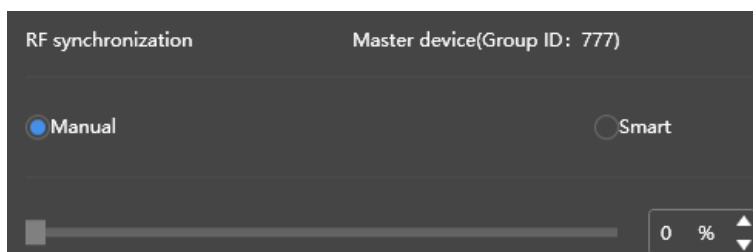
Figure 4-7 RF synchronization-brightness



4.2.1 Manual Adjustment

- Step 1 Choose **Terminal Control** > **Brightness adjustment**.
- Step 2 Select the target terminal in the terminal list.
- Step 3 Choose **Manual**, and drag the slider or enter a value to adjust screen brightness.

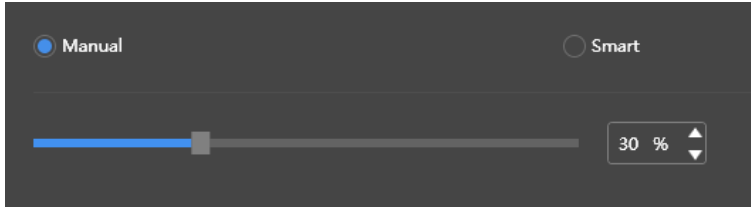Figure 4-8 Manual adjustment



4.2.2 Smart Adjustment


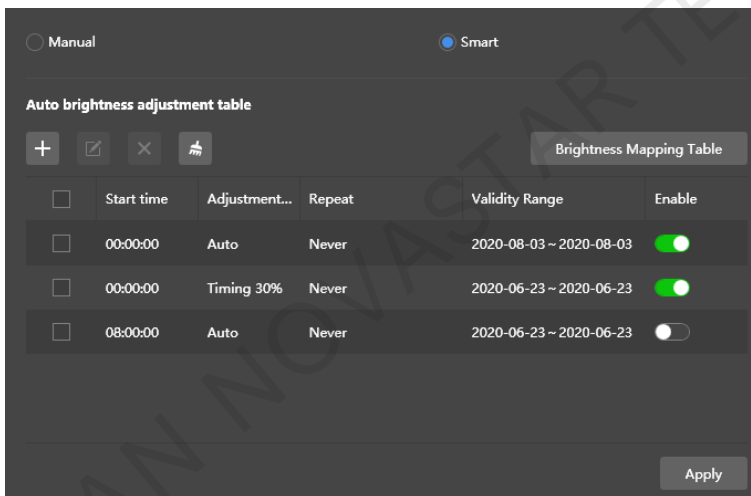
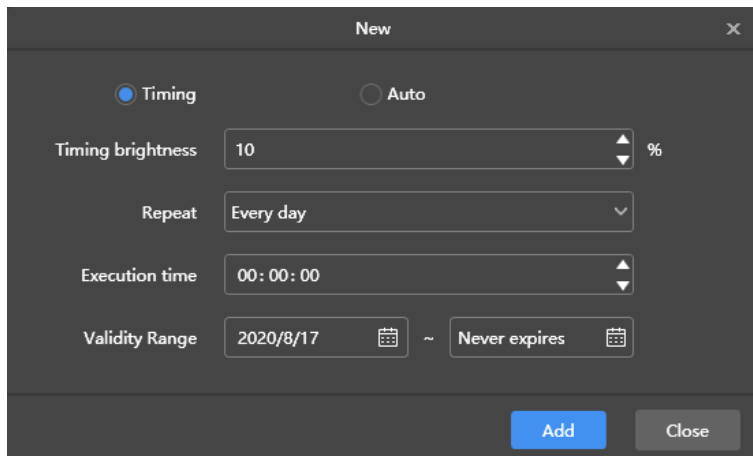
- Step 1 Choose **Terminal Control** > **Brightness adjustment**.
- Step 2 Select the target terminal in the terminal list.
- Step 3 Choose **Smart** and click . In the window that appears, choose **Timing** or **Auto** and set the corresponding brightness adjustment rules, then click **Add**.

Figure 4-9 Smart brightness adjustment



- Timing brightness adjustment: During the period that you set to enable smart adjustment, the screen brightness will be the fixed value that you manually set.

Figure 4-10 Scheduled brightness adjustment



New

☒ Timing ☐ Auto

Timing brightness: 10 %

Repeat: Every day

Execution time: 00:00:00


Validity Range: 2020/8/17 ~ Never expires

Add Close

- Automatic brightness adjustment: During the period that you set to enable auto adjustment, the screen brightness will be automatically adjusted according to the automatic brightness mapping table.

The automatic brightness mapping table divides the ambient brightness into several subsections and sets corresponding screen brightness to each subsection. The screen brightness will be automatically adjusted according to the ambient brightness subsection where the current ambient brightness belongs to.

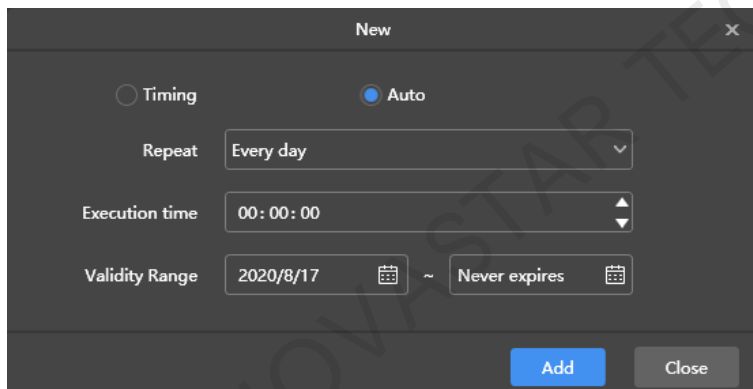Figure 4-11 Automatic brightness adjustment



New

☐ Timing ☒ Auto

Repeat: Every day

Execution time: 00:00:00

Validity Range: 2020/8/17 ~ Never expires

Add Close

Figure 4-12 Brightness mapping table

Ambient brightness (Lux)	Screen Brightness (%)	Operate
2000	30	
2300	35	
2600	40	
2900	45	
3200	50	
3500	55	
3800	60	

Step 4 After configuration, click **Apply**.

4.3 Video Source

Configure video source parameters and specify the rule of setting the input source to HDMI or the internal video source.

4.3.1 Video Source Parameter Configuration

Set the output offset position of the video source, resolution of the internal video source, and resolution of the HDMI video source.

Step 1 Choose **Terminal Control > Video Source**.

Step 2 Select the target terminal from the terminal list.

Step 3 In the **Parameter Configuration** area, configure the parameters.

- **Output Position:** Set the start position of the image displayed on the screen.
- **Internal Resolution:** Refers to the resolution of the operating system of the Taurus multimedia player. The internal resolution must be higher than the configured resolution of the screen.
- **HDMI Resolution:** Refers to the resolution of the external video source input from the HDMI IN connector.

In studio mode, users can enable full screen zoom to let the image automatically fit the screen.

Requirements of full screen zoom in studio mode:

- 64 pixels ≤ Video source width ≤ 2048 pixels
- Support for zooming out only

Figure 4-13 Parameter configuration

Parameter Configuration

Output Position (px) X: 0 Y: 0

Internal source

Resolution (px): 1280x720p-60

Width: 1280 Height: 720

HDMI

Resolution (px) Width: 1920 Height: 1080

Full Screen Zoom ☒ Enable

Step 4 After the configuration, click **Apply**.

4.3.2 Manual Switching

Immediately switch between the internal input source and HDMI input source.

Step 1 Choose **Terminal Control > Video source**.

Step 2 Select the target terminal in the terminal list.

Step 3 Choose **Manual** and configure parameters.

Figure 4-14 Manual switching

☒ Manual ☐ Timing ☐ HDMI preferred

Video source

Video Source Type: Internal source

Step 4 Click **Apply**.

4.3.3 Scheduled Switching

Switch between the internal input source and HDMI input source as scheduled.

Step 1 Choose **Terminal Control > Video source**.

Step 2 Select the target terminal in the terminal list.

Step 3 Choose **Timing**.

Figure 4-15 Scheduled switching

☐ Manual ☒ Timing ☐ HDMI preferred

Scheduled adjustment list

+ ✎ ✕ 🗑️

<input type="checkbox"/>	Time	Type	Repeat method	Sure to enable
<input type="checkbox"/>	00:00:00	Internal source	Every day	<input checked="" type="checkbox"/>
<input type="checkbox"/>	04:00:00	Internal source	Every day	<input checked="" type="checkbox"/>


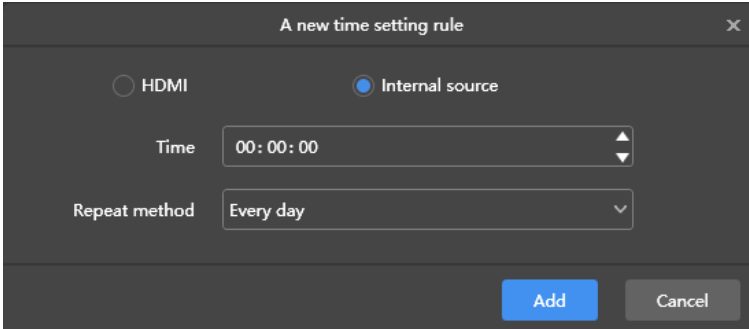
- Step 4 Click . In the pop-up dialog box, choose **Internal** or **HDMI**, and then set the time and cycle to use the video source. At last, click **Add**.

Figure 4-16 Creating a scheduled rule




- Step 5 After the configuration, click **Apply**.

4.3.4 HDMI Preferred

The HDMI port is preferred for playing the video in synchronous mode.

- Step 1 Choose **Terminal Control > Video source**.
- Step 2 Select the target terminal in the terminal list.
- Step 3 Choose HDMI preferred.

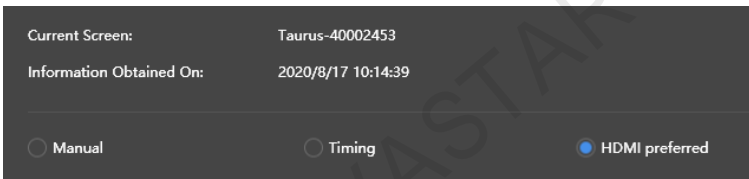Figure 4-17 HDMI preferred



- Step 4 After configuration, click **Apply**.


4.4 Screen Status Control

Set the current playing status of the screen.

4.4.1 Manual Control

- Step 1 Choose **Terminal Control > Screen Status Control**.
- Step 2 Select the target terminal in the terminal list.
- Step 3 Choose **Manual** to enter the manual settings page.

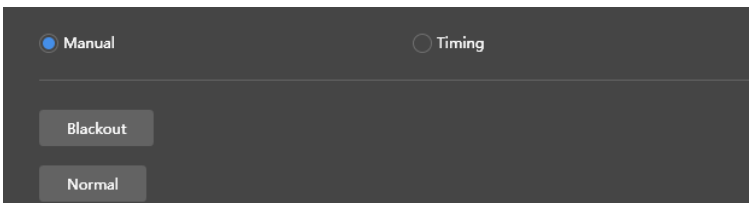Figure 4-18 Manual Control



Step 4 Click Blackout or Normal.

Here the blackout is to decrease the screen brightness to 0% instead of turning off the power.

4.4.2 Timing Control

Step 1 Choose **Terminal Control** > **Screen Status Control**.

Step 2 Select the target terminal in the terminal list.


Step 3 Choose **Timing** and click . In the window that appears, click **Blackout** or **Normal** and set the playback time and interval, then click **Add**.

Figure 4-19 Scheduled control


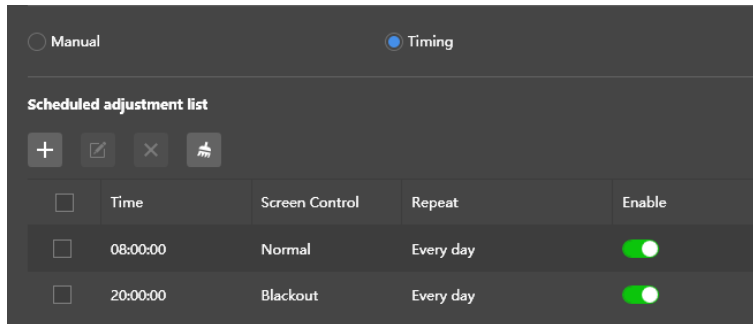


Figure 4-20 Creating a scheduled rule

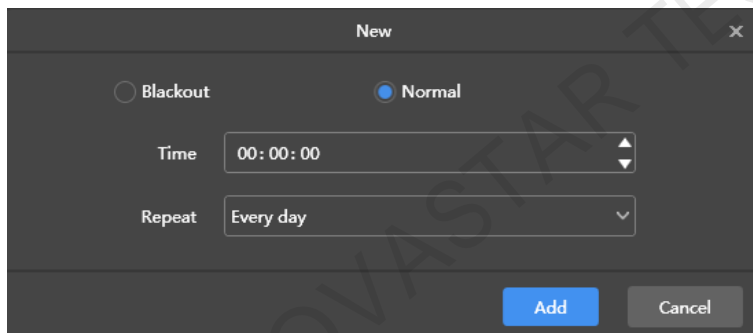

Step 4 After the settings, click **Apply**.

4.5 Time Synchronization

Time synchronization is used for syncing the time of terminal players.

Table 4-1 Time synchronization methods

Method	Time Reference	Application Scenario
Manual	Time of the PC with ViPlex Express installed	Manually set the time zone of the terminal.
Automatic	GPS time synchronization: Radio signal from a GPS satellite	Sync the time of the Taurus with GPS, NTP or RF. All these three methods are applicable to synchronous playback. • The accuracy of GPS time synchronization depends on the satellite signal and it is suitable for outdoor applications without
	NTP time synchronization: Time of the NTP server	

Method	Time Reference	Application Scenario
RF	Time of the reference device	<p>obstructions around</p> <ul style="list-style-type: none"> The accuracy of NTP time synchronization depends on the network speed and it is suitable for situations with a low requirement for synchronization. RF time synchronization does not depend on the network and has a high synchronization performance. It is suitable for situations with a high requirement for synchronization.

Note:

To enable synchronous playback, you need to turn on the synchronous playback function after syncing the time automatically or with RF.

4.5.1 Manual Time Synchronization

Sync the time of the terminal with the date and time of the selected time zone.

Step 1 Choose **Terminal Control > Time synchronization management**.

Step 2 Select the target terminal from the terminal list.

Step 3 Select a time zone from the **Time Zone** drop-down box. You can also adjust the current date and time as required.

If the current time zone observes daylight saving time and the current date is within the range of daylight saving time, **Daylight saving time enabled** will be displayed, otherwise, it will not be displayed.

Figure 4-21 Selecting a time zone

Step 4 After the settings, click **Apply**.

4.5.2 GPS Time Synchronization

Prerequisites

- The products that support GPS time synchronization include the TCC70, T1-4G, T3, T6, TB1-4G, TB2-4G, TB3, TB4, TB4A, TB6, and TB8.
- Before GPS time synchronization, users need to buy and install network modules.
- The Taurus terminal version is V3.3.0 or later.

Operating Procedure

Step 1 Choose **Terminal Control > Time synchronization management**.


Step 2 Select the target terminal from the terminal list.

Step 3 (Optional) Select a time zone from the **Time zone** drop-down box.

If the current time zone observes daylight saving time and the current date is within the range of daylight saving time, **Daylight saving time enabled** will be displayed, otherwise, it will not be displayed.

Step 4 Check **Automatically sync time** and select GPS time synchronization.

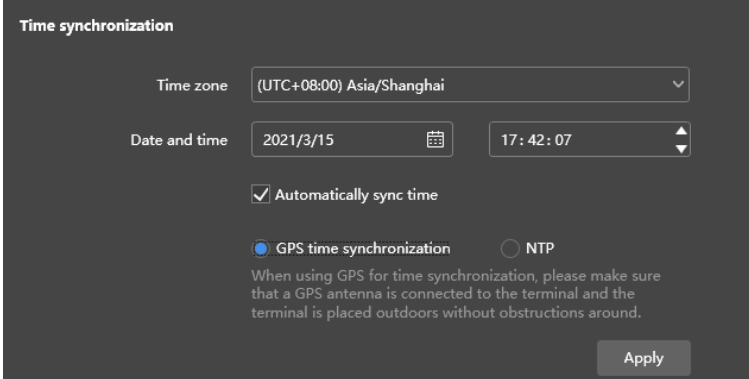Figure 4-22 GPS time synchronization



The screenshot shows the 'Time synchronization' settings window. It includes a 'Time zone' dropdown set to '(UTC+08:00) Asia/Shanghai', a 'Date and time' section with a date of '2021/3/15' and a time of '17:42:07'. The 'Automatically sync time' checkbox is checked. Underneath, 'GPS time synchronization' is selected with a radio button, while 'NTP' is unselected. A note states: 'When using GPS for time synchronization, please make sure that a GPS antenna is connected to the terminal and the terminal is placed outdoors without obstructions around.' An 'Apply' button is at the bottom right.

Step 5 After the settings, click **Apply**.

4.5.3 NTP Time Synchronization

Sync the time of terminal players with the time of the NTP server.

Step 1 Choose **Terminal Control > Time synchronization management**.

Step 2 Select the target terminal from the terminal list.

Step 3 (Optional) Change the time zone in the **Time Zone** drop-down box.

If the current time zone observes daylight saving time and the current date is within the range of daylight saving time, **Daylight saving time enabled** will be displayed, otherwise, it will not be displayed.


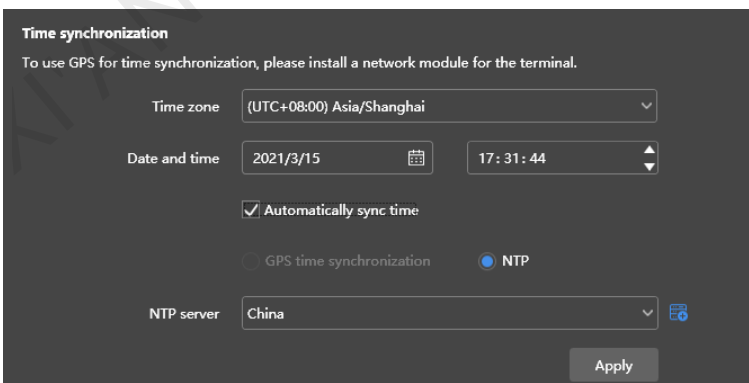
Step 4 Check **Automatically sync time** and **NTP**, and then select an NTP server to sync the time of the terminal with the time of the NTP server. If the existing NTP servers cannot meet the requirements, click  to customize a server.

Figure 4-23 Selecting an NTP server



The screenshot shows the 'Time synchronization' settings window. It includes a 'Time zone' dropdown set to '(UTC+08:00) Asia/Shanghai', a 'Date and time' section with a date of '2021/3/15' and a time of '17:31:44'. The 'Automatically sync time' checkbox is checked. Underneath, 'NTP' is selected with a radio button, while 'GPS time synchronization' is unselected. An 'NTP server' dropdown is set to 'China', with an 'Add' icon to its right. An 'Apply' button is at the bottom right. A note at the top states: 'To use GPS for time synchronization, please install a network module for the terminal.'

Step 5 After the settings, click **Apply**.

4.5.4 RF Time Synchronization

Related Information

To use RF time synchronization, you need to set one of the Taurus units on the RF network as the master device and others as slave devices.

- The master device is used for time reference and the time of the slave devices is synced with the time of the master device via the RF signal.
- The Taurus allows the master device to sync time with an NTP server.

Prerequisites

- The Taurus products support RF time synchronization, such as T3, T6, TB3, TB4, TB6, and TB8.
- Before RF time synchronization, RF modules must be installed. ViPlex Express can detect and display the RF module status.

Operating Procedure

Set the master and slave devices

Step 1 Choose **Terminal Control > RF management**.

Step 2 Select the target terminal from the terminal list.

Step 3 Turn on RF synchronization.

Step 4 Set the current device as the master device or slave device.

Step 5 Set a group ID.

If you enter the group ID of the master device for a slave device, the slave device will be assigned to the same group as the master device.

Step 6 Select **Time synchronization**.

After RF synchronization is applied, the time, brightness, volume, and environment monitoring data of the slave devices will be kept the same as the master device via the RF signal. Select the options that require RF synchronization.

Figure 4-24 Master device

Parameter Information

RF synchronization ☒

Set this terminal as ☒ Master device ☐ Slave device

Group ID

Please enter a new group ID for the master device. Numbers and letters are supported.

Apply RF synchronization to ☒ Time synchronization
☐ Brightness Synchronization
☐ Volume Synchronization
☐ Environment monitoring data

Apply

Figure 4-25 Slave device

Parameter Information

RF synchronization ☒

Set this terminal as ☐ Master device ☒ Slave device

Group ID

Please enter a new group ID for the master device. Numbers and letters are supported.

Apply RF synchronization to ☒ Time synchronization
☐ Brightness Synchronization
☐ Volume Synchronization
☐ Environment monitoring data

Apply

Step 7 Click **Apply**.

Set a time synchronization method for the master device

You need to set time synchronization rules for the master device only and the time of the slave devices will be kept in sync with the time of the master device via the RF signal.

Step 8 Choose **Terminal Control > Time synchronization management**.

Step 9 Select the master terminal from the terminal list.

The information relating to RF synchronization is displayed, which indicates that RF synchronization of the current terminal is enabled.

Figure 4-26 RF synchronization-Time synchronization

Time synchronization

To use GPS for time synchronization, please install a network module for the terminal.

RF synchronization Master device(Group ID : 777)

Time zone

Date and time

☒ Automatically sync time

☐ GPS time synchronization ☒ NTP

NTP server

Apply

Step 10 View the time zone and time of the current terminal.


If the current time zone observes daylight saving time and the current date is within the range of daylight saving time, **Daylight saving time enabled** will be displayed, otherwise, it will not be displayed.

Step 11 Configure rules for time synchronization.

- Manual time synchronization: Select a time zone from the **Time Zone** drop-down box to sync the time of the terminal with the date and time of the time zone. You can also adjust the current date and time as required.
- GPS time synchronization: Check **Automatically sync time** and select GPS time synchronization.

Note:

GPS time synchronization can be implemented when the master device meets the prerequisites in [4.5.2 GPS Time Synchronization](#).

- NTP synchronization: Check **Automatically sync time**, select NTP time synchronization, and then select an NTP server to sync the time of the terminal with the time of the NTP server. If the existing NTP servers cannot meet the requirements, click  to customize a server.

Step 12 After the settings, click **Apply**.

4.6 Restart Configuration

Restart terminals immediately and configure restart rules.


4.6.1 Restarting Immediately

Step 1 Choose **Terminal Control > Restart Configuration**.

Step 2 Select the target terminal in the terminal list.

Step 3 Click Restart Now.

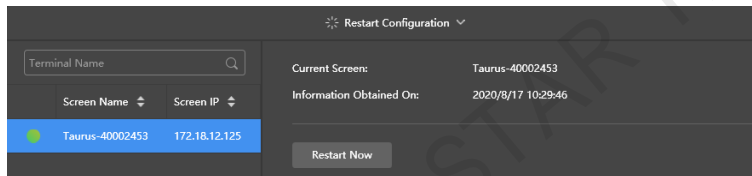Figure 4-27 Restart



Step 4 Click **OK** in the pop-up dialog box to restart the terminal immediately.

4.6.2 Scheduled Restart

Step 1 Choose **Terminal Control > Restart Configuration**.

Step 2 Select the target terminal from the terminal list.


Step 3 Click . Set the time and interval to restart a terminal in the pop-up dialog box and then click **Add**.

Figure 4-28 Scheduled adjustment


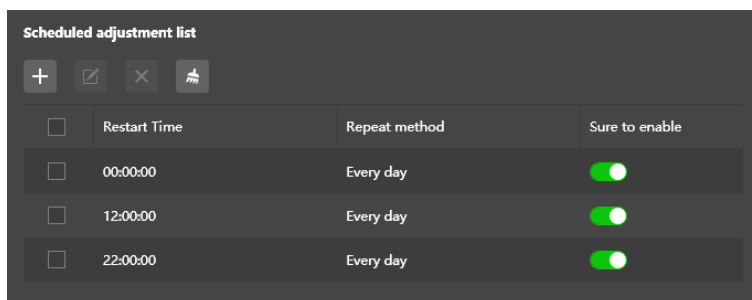


Figure 4-29 Creating a scheduled rule

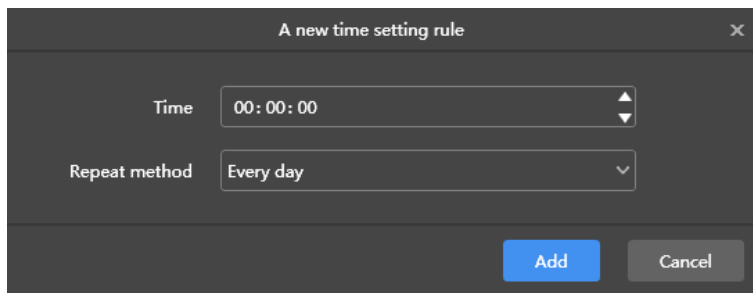

Step 4 After the settings, click **Apply**.

4.7 Color Temperature


Set the color temperature of the screen, including neutral white, standard white, and cool white.

Step 1 Choose **Terminal Control > Color temperature**.

Step 2 Select the target terminal in the terminal list.

Step 3 Select a color temperature type.

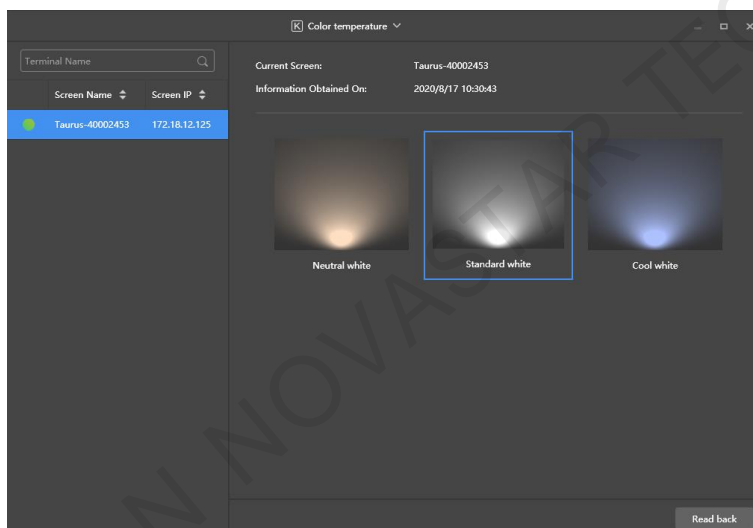Figure 4-30 Color temperature



4.8 Monitoring


Step 1 Choose **Terminal Control > Monitoring**.

Step 2 Select the target terminal in the terminal list.

Step 3 Check the terminal hardware information listed below. If the terminal has an external storage device, you can also check the external storage information.

- Disk size
- Memory availability
- CPU usage
- Ambient brightness

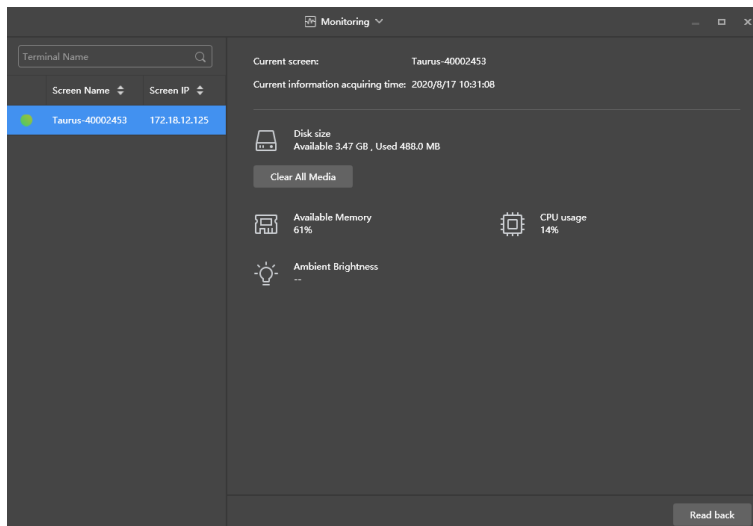Figure 4-31 Monitoring



Step 4 If you want to clean up the hard disk, click **Clear All Media** to delete all the media and solutions.

4.9 Play Logs

View and export play logs.

4.9.1 Querying Play Logs

- Step 1 Choose **Terminal Control > Play logs**.
- Step 2 Select the target terminal in the terminal list.
- Step 3 Choose the time range of the play log that you want to view and then click **Query**.
- Step 4 In the play log list, click a play log name to view the summary and detailed information of the log.

4.9.2 Exporting Play Logs

- Step 1 Choose **Terminal Control > Play logs**.
- Step 2 Select the target terminal in the terminal list.
- Step 3 In the play log list, select the target play log.
- Step 4 Click **Export**.
- Step 5 In the pop-up dialog box, choose the export path and format.
- Step 6 Click **OK**.

4.10 Font Management

Manage the fonts supported by the Taurus.

4.10.1 Adding Fonts

- Step 1 Choose **Terminal Control > Font management**.
- Step 2 Select the target terminal in the terminal list.


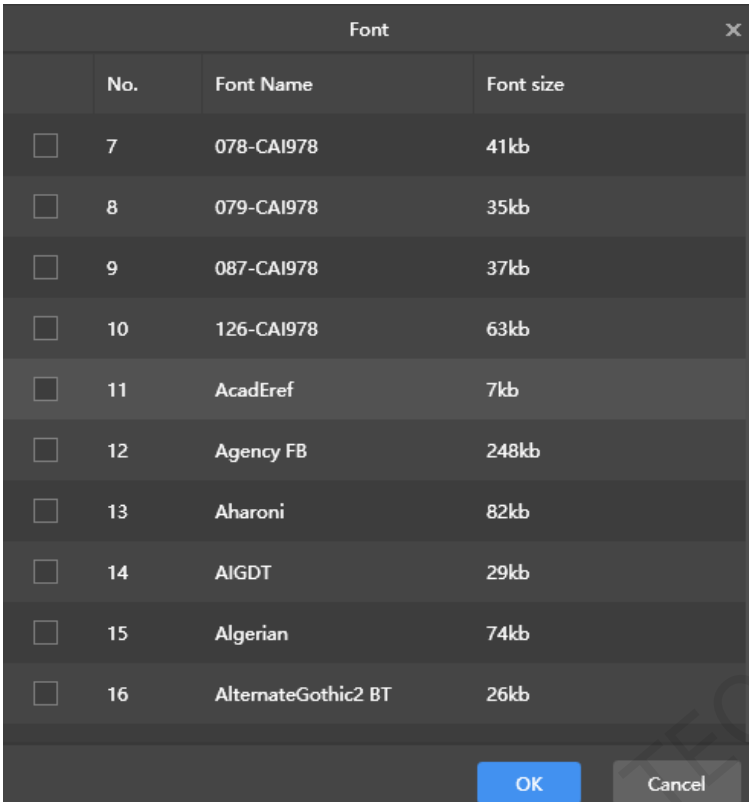
Step 3 Click  next to **Name** to acquire local fonts on the PC.

Figure 4-32 Local fonts




	No.	Font Name	Font size
<input type="checkbox"/>	7	078-CAI978	41kb
<input type="checkbox"/>	8	079-CAI978	35kb
<input type="checkbox"/>	9	087-CAI978	37kb
<input type="checkbox"/>	10	126-CAI978	63kb
<input type="checkbox"/>	11	AcadEref	7kb
<input type="checkbox"/>	12	Agency FB	248kb
<input type="checkbox"/>	13	Aharoni	82kb
<input type="checkbox"/>	14	AIGDT	29kb
<input type="checkbox"/>	15	Algerian	74kb
<input type="checkbox"/>	16	AlternateGothic2 BT	26kb

Step 4 Select the target font in the pop-up dialog box.

Step 5 Click **OK**.

Step 6 Click **Update**. The update progress will be shown in the **Update result** column.

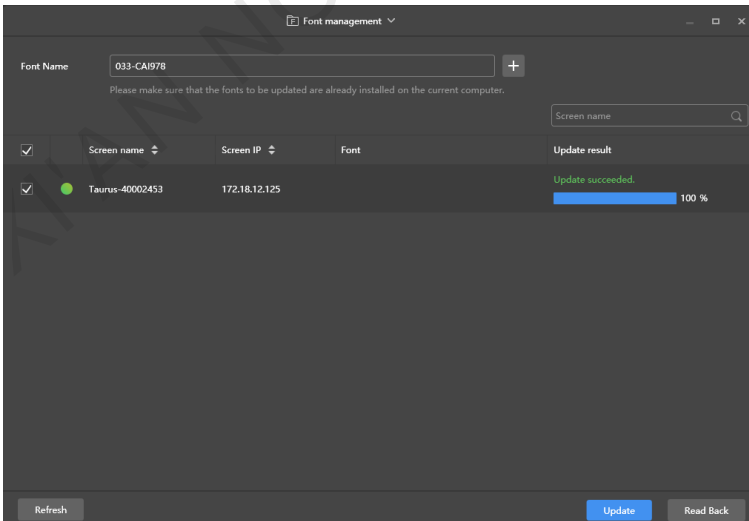Figure 4-33 Adding a font



Screen name	Screen IP	Font	Update result
<input checked="" type="checkbox"/>	Taurus-40002453	172.18.12.125	Update succeeded. 100 %


4.10.2 Deleting Fonts

Step 1 Choose **Terminal Control > Font management**.

Step 2 Select the target terminal in the terminal list.


Step 3 Click **Read back** at the bottom right to read back the fonts on the terminal.

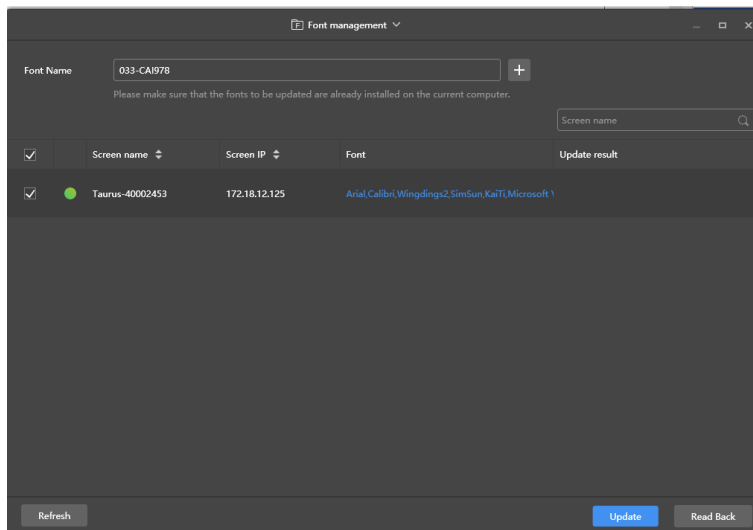Figure 4-34 Reading back a font



Step 4 Click the link in the **Font** column of the target terminal. The **Font list in terminal** page is displayed.

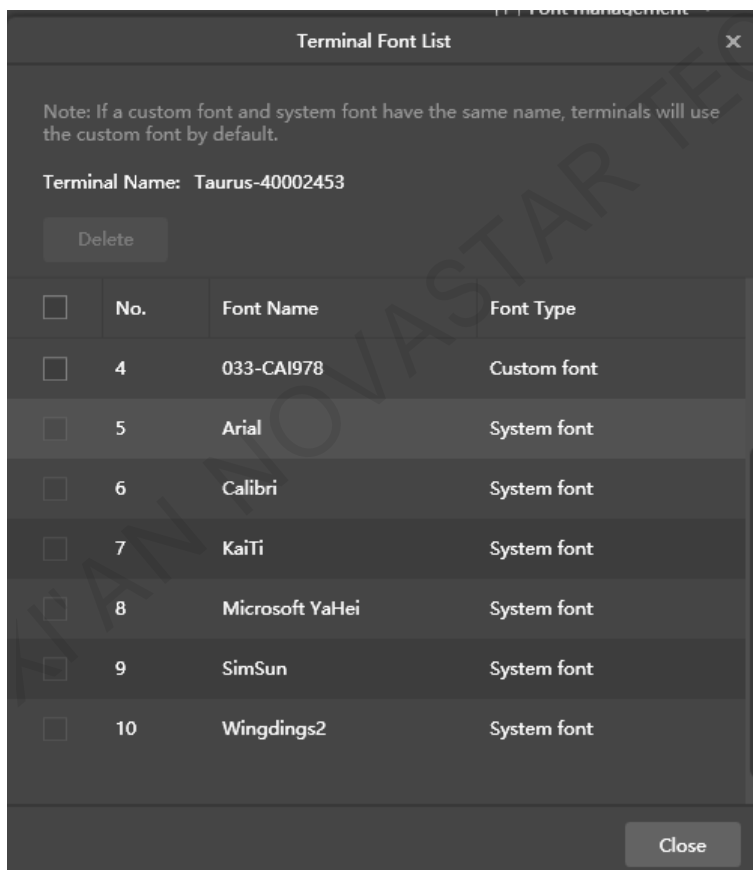Figure 4-35 Terminal font list



Step 5 Select target fonts.

Step 6 Click **Delete**.

4.11 Network Configuration

Configure the current network, including wired network, Wi-Fi AP, Wi-Fi Sta, and mobile network.


4.11.1 Configuring Wired Network

Application Scenarios

- Set IP address based on the actual needs while connecting terminals to the Internet via Ethernet cable.
- When the PC with ViPlex Express installed and the multimedia player are connected with an Ethernet cable, turn on the DHCP of the multimedia player and the DHCP service at the bottom left of ViPlex Express, select a local IP address, and then click **OK** to automatically connect to the Taurus.

If the connection is not stable, set a static IP address for the PC.

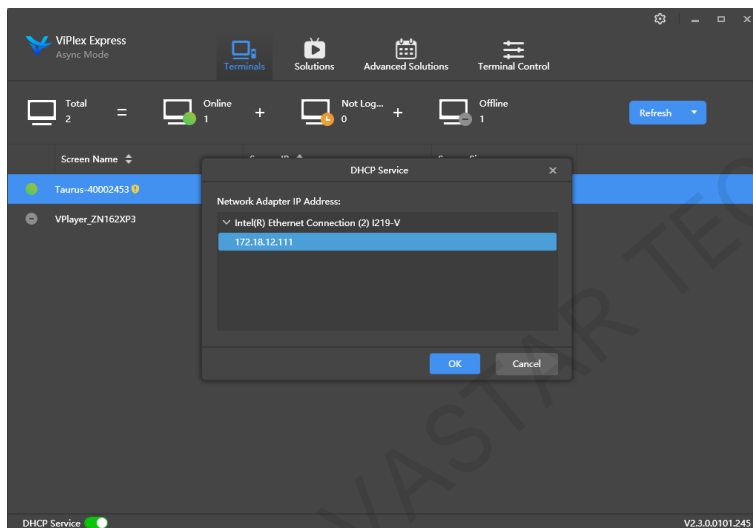Figure 4-36 DHCP service (ViPlex Express)



Related Information

When the Taurus is delivered, the DHCP is turned on by default.

Operating Procedure

- Step 1 Choose **Terminal Control > Network configuration**.
- Step 2 Select the target terminal in the terminal list.
- Step 3 In the **Wired network configuration** area, perform the following operations based on actual needs.
 - Select **Enable** next to **Dynamic DHCP** to get an IP address automatically.
 - Deselect **Enable** next to **Dynamic DHCP** and configure a static IP address.

Figure 4-37 Wired network configuration

Wired network configuration

DHCP ☒ Enable

IP Address 172 . 18 . 12 . 125

Subnet Mask 255 . 255 . 255 . 0

Gateway 172 . 18 . 12 . 1

DNS 172 . 16 . 0 . 202

DNS2 172 . 16 . 0 . 201

Apply

Step 4 Click **Apply**.

4.11.2 Configuring Wi-Fi AP

Change the SSID, password and channel of a terminal.

Step 1 Choose **Terminal Control > Network configuration**.

Step 2 Select the target terminal from the terminal list.

Step 3 Under **Screen AP configuration**, do the following as required.

- AP Status: Turn on/off the terminal Wi-Fi AP.
- SSID and Password: Change the ID and password of the terminal Wi-Fi AP.

The default SSID of the terminal Wi-Fi AP is "AP + *Last 8 digits of the SN*" and the default password is "12345678".

- Advanced > Channel: Switch the channel of the Wi-Fi AP.

The channel can be switched when the terminal software is V2.2.0 or later.

Figure 4-38 Screen AP configuration

Screen AP configuration

AP ☒

ssid AP

1-32 characters including numbers, letters and symbols

Password

8-25 characters including numbers, letters and symbols

Channel

Collapse

Apply

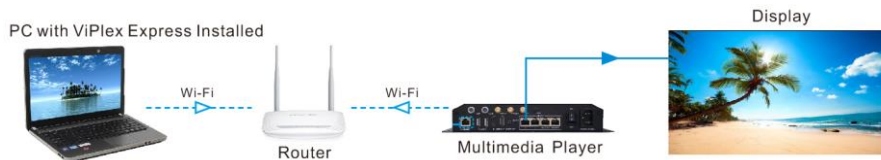
Step 4 Click **Apply**.

4.11.3 Configuring Wi-Fi Sta

Application Scenarios

The Taurus terminals designed with dual Wi-Fi modes, such as T3, T6, TB3, TB6, and TB8, support the following functions after users configure Wi-Fi Sta for the Taurus with ViPlex Express.

- If the router is connected to the Internet, terminals can access the Internet via the router after Wi-Fi Sta is configured.
- The PC with ViPlex Express installed and the multimedia player are connected to the same WLAN via the Wi-Fi AP of the router.




Operating Procedure

Step 1 Choose **Terminal Control > Network configuration**.

Step 2 Select the target terminal from the terminal list.


Step 3 In the **Wi-Fi configuration** area, turn on Wi-Fi.

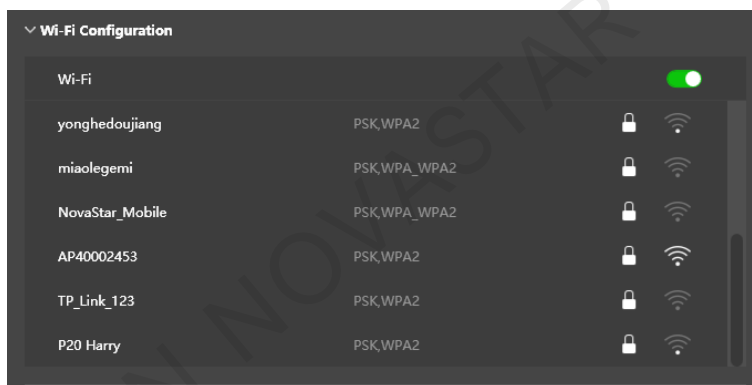Figure 4-39 Wi-Fi configuration



Step 4 Double click the Wi-Fi information of the router, enter the password and then click **OK**.

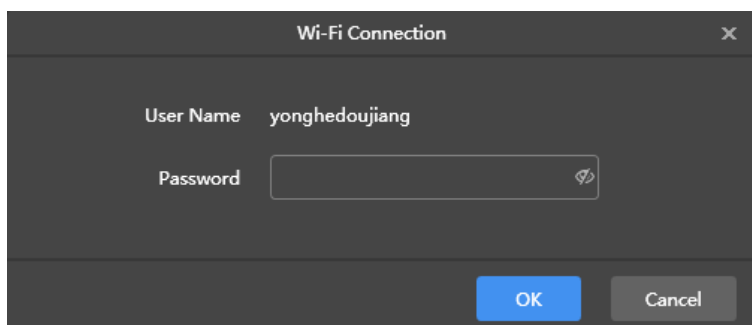Figure 4-40 Wi-Fi connection



4.11.4 Switching Wi-Fi Mode

Application Scenarios

For the Taurus terminals designed with a single Wi-Fi mode, such as T1-4G, TB1-4G, TB2-4G, TB4, and TB4A, users can switch the built-in Wi-Fi AP mode to Wi-Fi Sta mode with ViPlex Express to allow for WLAN connection configuration of the Taurus terminals.

Prerequisites

Table 4-2 Product model and version requirements

Taurus	Firmware Version	ViPlex Express Version
T1-4G	V3.2.0 and later	V2.6.2.0201 and later
TB1-4G		
TB2-4G		
TB4		
TB4A		

Operating Procedure


Note:

This section introduces how to switch the built-in Wi-Fi AP mode of a terminal to Wi-Fi Sta mode. To ensure that the mode switching is not affected by network disconnection, connect the PC with ViPlex Express installed to the terminal with an Ethernet cable.

Log In to Terminals

- Step 1 Open ViPlex Express.
- Step 2 At the bottom left of the page that appears, turn on the DHCP service, select a local IP address and click **OK**.

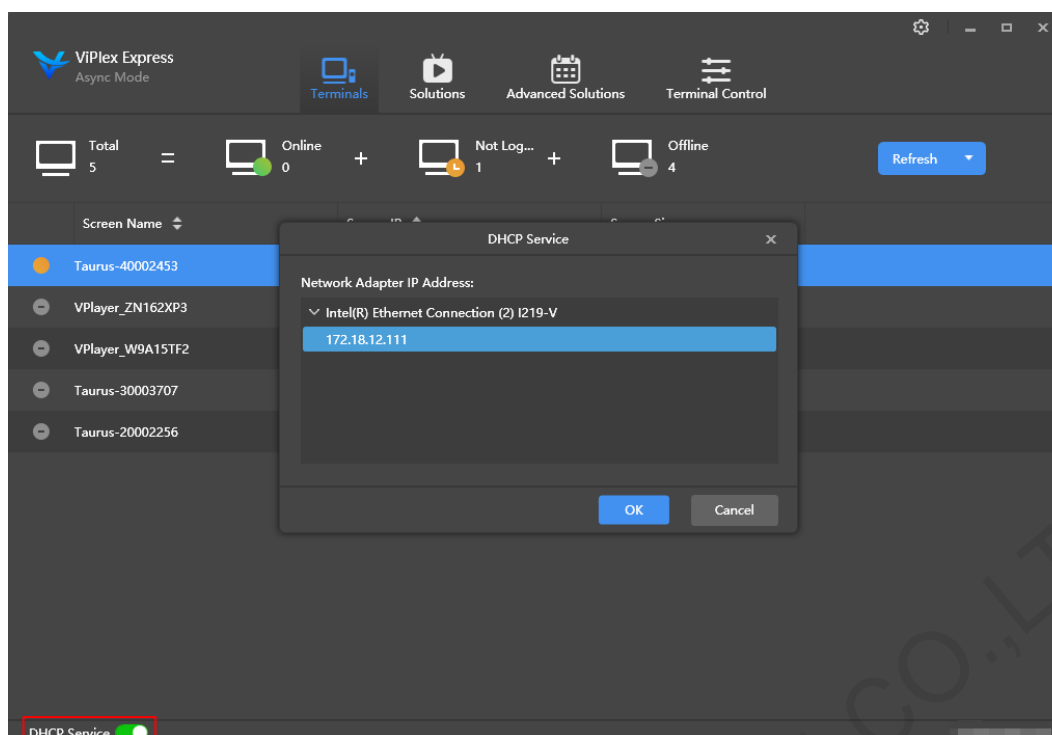Figure 4-41 DHCP service switch



Step 3 Click **Refresh** to refresh the screen list.

After detecting a terminal, ViPlex Express will try to log in to the terminal with the default account or the account used for the last login.

- : Denotes that the Taurus is online and you can log in to it. Go to [Step 4](#).
- : Denotes the Taurus is offline and you cannot log in to it.
- : Denotes you have successfully logged into the Taurus.

Step 4 Click **Connect** next to the screen information.

Step 5 Enter the password for the "admin" user and click **OK**.


The login user name of the Taurus series multimedia players is "admin" and the default password is "123456".

Switch the Wi-Fi Mode

Step 6 Choose **Terminal Control** > **Network configuration**.


Step 7 Select the target terminal from the terminal list.

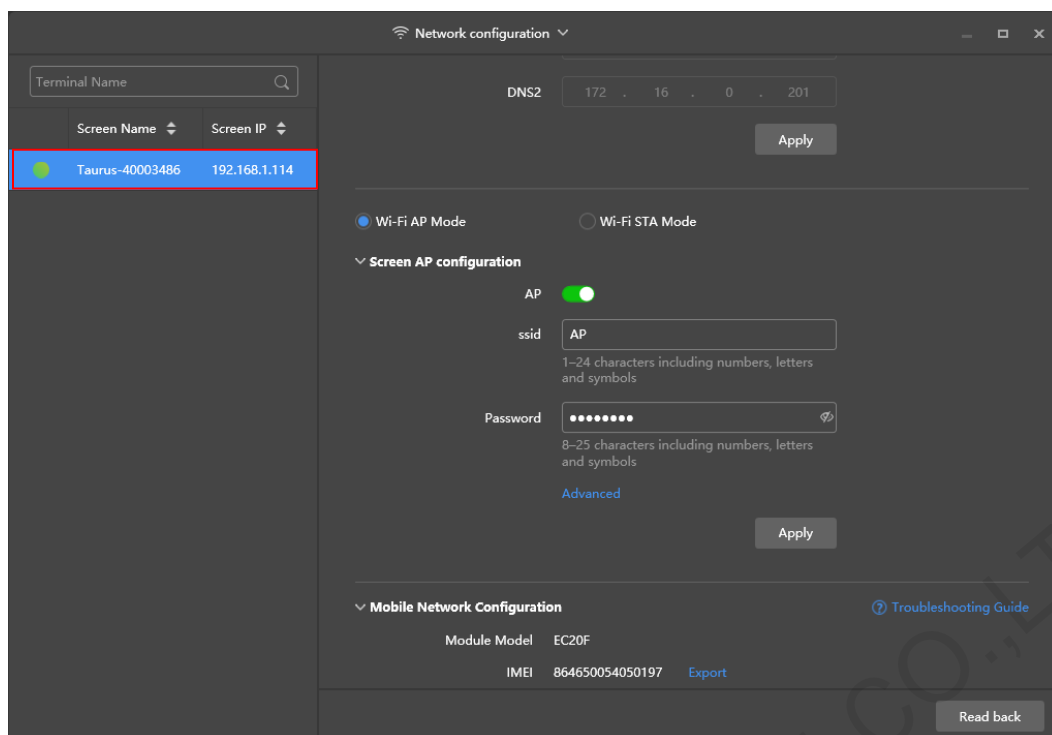Figure 4-42 Network configuration



Step 8 Select **Wi-Fi-STA Mode**. In the box that appears, enter the SSID and password of the Wi-Fi AP.

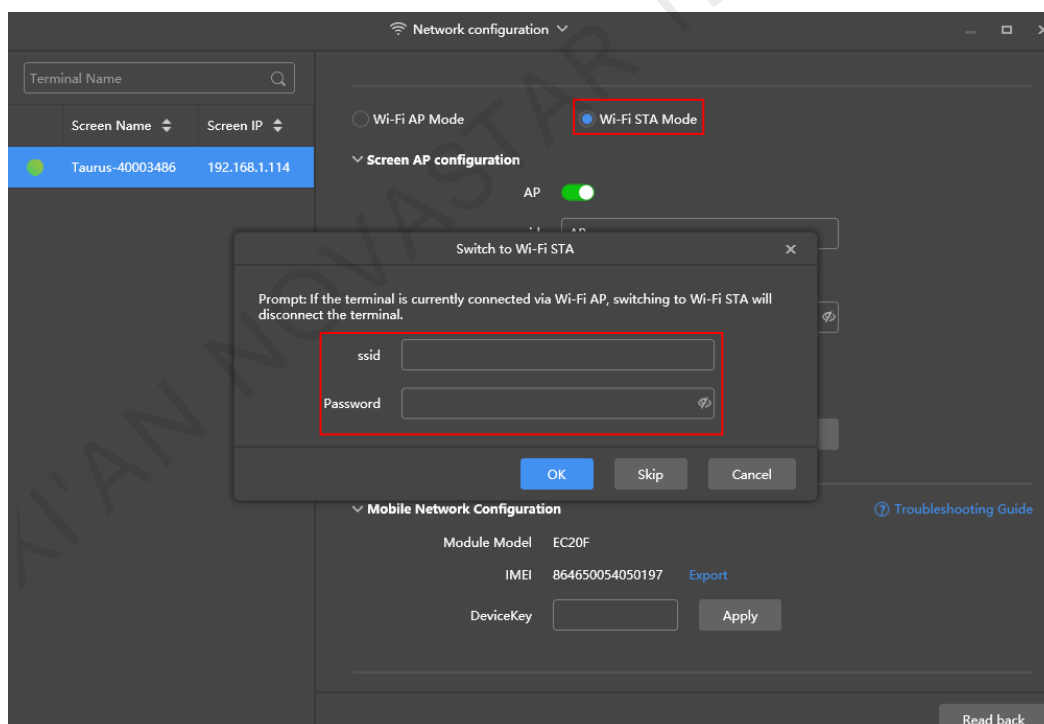Figure 4-43 Wireless network configuration



Step 9 Click **OK**.

Notes:

Make sure the CLOUD indicator is always on, which denotes that the Internet connection is available.

Make sure the frequency band of the connected Wi-Fi is 2.4 GHz.

Step 10 Unplug the Ethernet cable between the PC and the Taurus.
www.novastar.tech


The priority of the Internet connection methods for the Taurus is in the following order: Wired network > Wi-Fi network > 4G network. After you switch to Wi-Fi Sta mode in ViPlex Express, if a wired network is connected at the same time, the Wi-Fi network will be disconnected automatically.

4.11.5 Configuring Mobile Network

Terminals with a network module can access the Internet via a mobile network. ViPlex Express automatically detects mobile network status and displays the detection result.

Note:

The Taurus series products that can be installed with network modules include the TB1-4G, TB2-4G, TB3, TB4, TB6, and TB8.

- Step 1 Insert the 4G card into the slot.
- Step 2 Choose **Terminal Control > Network configuration**.
- Step 3 Select the target terminal in the terminal list.
- Step 4 On the **Mobile network configuration** page, turn on the mobile network.
- Step 5 Click  to expand the APN configuration page.
- Step 6 Click **Add**.
- Step 7 Enter parameters according to the APN information provided by the carrier and then click **OK**.
- Step 8 Select the APN and click **Connect**.




Note:

[Step 5](#) to [Step 8](#) are required for customizing an APN or setting an APN for a new SIM card.

4.11.6 Configuring Network Detection


Terminals ping the cloud platform and www.baidu.com to detect network connection status by default. Users can also configure required addresses to ping and enable or disable the addresses.

- Step 1 Choose **Terminal Control > Network configuration**.
- Step 2 Select the target terminal in the terminal list.
- Step 3 In **Network Detection**, configure detection addresses.

- Click  to add an address.
- Click  to modify an address.
- Click  to delete an address.

The default configuration cannot be modified and deleted.

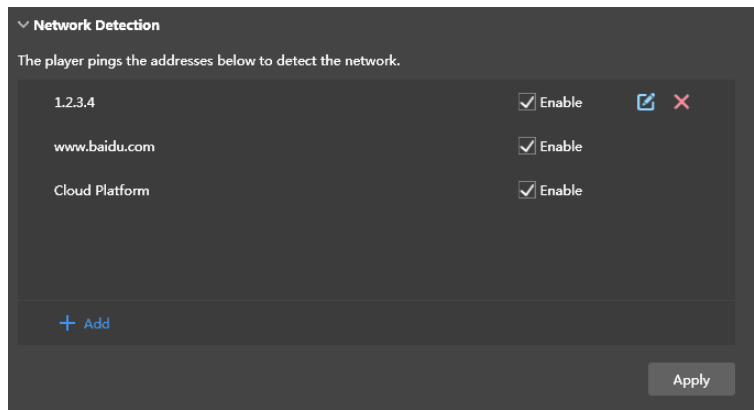Figure 4-44 Network detection



Step 4 Enable or disable detection addresses.

- Select **Enable** to detect the terminal network by pinging the corresponding address.
- Deselect **Enable** to detect terminal network not by pinging the corresponding address.

Step 5 Click **Apply**.

4.12 Server Configuration

Connect to VNNOX Standard/AD. Authentication information is required during the configuration.

How to check player authentication information:

Log in to VNNOX (www.vnnox.com) and choose  > **Player Authentication** on the homepage of the cloud platform.

4.12.1 Binding to VNNOX Standard/AD


You can bind a terminal to VNNOX and create an asynchronous player.

Step 1 Choose **Terminal Control** > **Server configuration**.

Step 2 Select the target terminal from the terminal list.

Step 3 In **Bind to VNNOX Standard/AD**, select a server and enter the authentication user name, authentication password and player name. The authentication information must be consistent with the information in VNNOX.

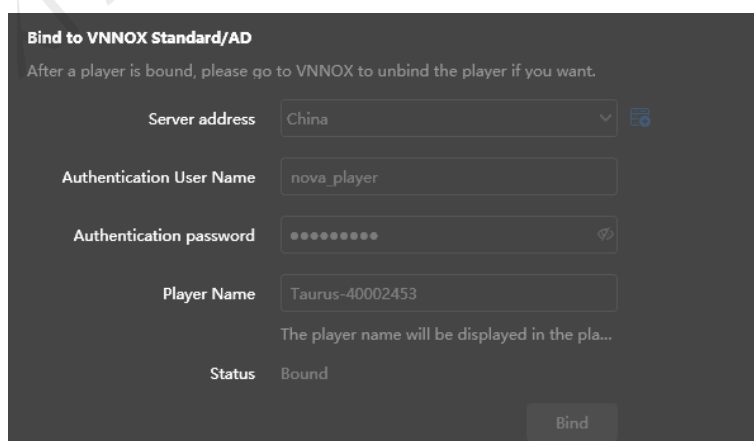Figure 4-45 Binding to VNNOX Standard/AD



Step 4 Click **Bind**.

4.12.2 Binding to iCare

Terminals can be registered on iCare. Multiple terminals can be selected for batch operations.

- Step 1 Choose **Terminal Control** > **Server configuration**.
- Step 2 Select the target terminal from the terminal list.
- Step 3 In **Bind to iCare**, select a server and enter the user name.

The authentication information must be consistent with the information in VNNOX.

Figure 4-46 Binding to iCare



The screenshot shows a dark-themed window titled "Bind to iCare". It contains three main input fields: "Server address" with a dropdown menu currently showing "China", "User Name" with a text box containing "nova_huixy", and "Status" which displays "Bound". A blue plus icon is visible next to the "Server address" dropdown. At the bottom right, there is a grey button labeled "Bind".

- Step 4 Click **Bind**.

4.13 Terminal Upgrade

- When the Taurus is earlier than V2.1.4, it cannot be directly upgraded to V3.0.0 or later. Users have to upgrade it to V2.1.4 by local upgrade first.
- When the Taurus is later than V2.1.4, there is no limit to the version during the upgrade.

Note:

Do not disconnect the power supply during the upgrade. The Taurus will restart once.

4.13.1 Online Upgrade


Upgrade terminal versions online. Before you begin, please make sure that your PC can access the Internet.

- Step 1 Choose **Terminal Control** > **Terminal Upgrade**.
- Step 2 Select **Online Upgrade**.

The system decides whether a terminal needs to be upgraded.

- Yes. The current version information and **More** will be displayed, as shown in [Figure 4-47](#). Go to [Step 3](#).
- No. Only the current version information is displayed. No further operation is required.

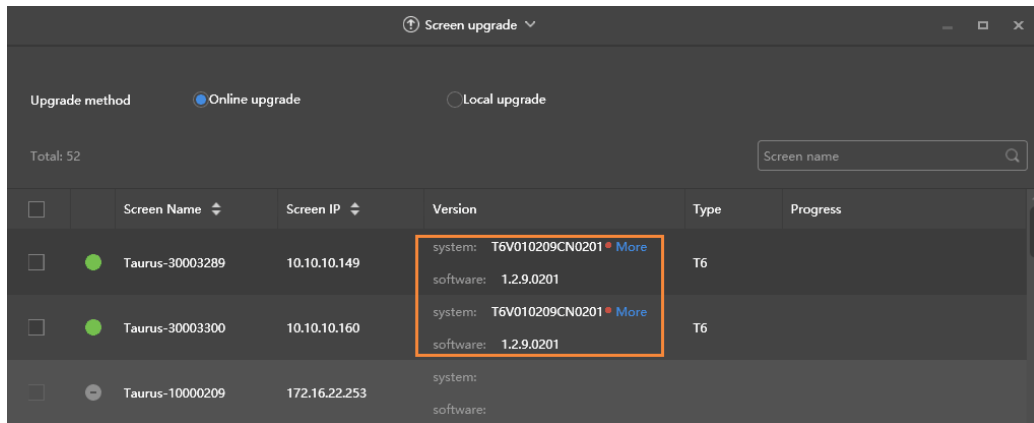Figure 4-47 Online upgrade



Step 3 Click **More** and view the related information of the new version.

Step 4 In the terminal information list, select one or more upgradable terminals and click **Upgrade**.

The upgrade progress is displayed.

4.13.2 Local Upgrade

Use local files to upgrade terminal versions.

Step 1 Choose **Terminal Control > Terminal Upgrade**.

Step 2 Select **Local Upgrade**.

Step 3 Select the upgrade package path.

Step 4 In the terminal information list, select one or more upgradable terminals and click **Upgrade**.

The upgrade progress is displayed.

4.14 Power Control

When the power switch in ViPlex Express is turned on, the relay will operate and the circuit is connected. When the power switch in ViPlex Express is turned off, the relay will release and the circuit is disconnected.

4.14.1 Configuring Power Tags

Application Scenarios

Customizing a tag for each relay allows terminal relays with the same tag to operate or release uniformly.

Prerequisites

- The terminal is connected to a relay card.
- The terminal software is V2.2.0 or later.

If the terminal software is earlier than V2.2.0, the **Power control** page of the earlier versions will be displayed and a prompt will be displayed to remind the user to upgrade the terminal to V2.2.0 or later.

Operating Procedure

Step 1 Choose **Terminal Control > Power control**.

Step 2 Select the target terminal from the terminal list.

Step 3 Click **Configure Power Tag** to access the **Power Tag** page. Do the following according to the actual conditions.

- Board power: Control power supplies using relays on terminals. The default tag is **Screen Power** which can be customized.
- External power: Control power supplies using relays on terminals with customized baseboards (Only when the TKS series terminals have customized baseboards and are installed with relays, external power supplies can be connected.). The default tag is **Screen Power** which can be customized.
- Multi-function card power: Control power supplies using relays on the MFN300 multi-function card. Only the tags selected and set for the multi-function card in NovaLCT can be viewed.

Step 4 Click **OK**.

4.14.2 Controlling Power Manually

Step 1 Choose **Terminal Control > Power control**.


Step 2 Select the target terminal from the terminal list.

Step 3 Select **Manual** to enter the manual setting page.

Step 4 Turn on or off the power switch.

An example of information on the multi-function card power supply is shown in [Figure 4-48](#).

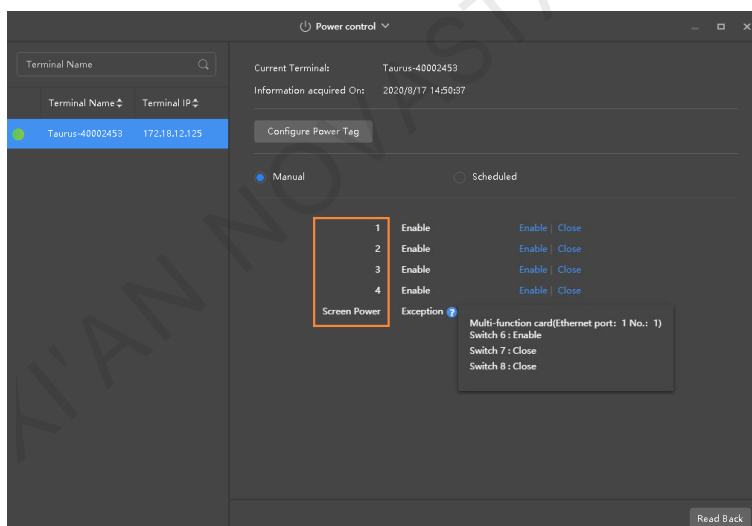Figure 4-48 Manual setting




The tags in the orange box can be associated with one or more relay circuits. When multiple relay circuits are associated and each of them is turned on (or off), **Enable** (or **Close**) is displayed, otherwise, **Mixture** is displayed and the detailed information of each circuit is provided.

4.14.3 Controlling Power as Scheduled

Step 1 Choose **Terminal Control > Power control**.

Step 2 Select the target terminal from the terminal list.

- Step 3 Choose **Scheduled** and click . In the window that appears, specify the device to be controlled, time and interval, and then click **OK**.
- Step 4 After the settings are done, click **Apply**.

4.15 RF Management

Set parameters related to RF synchronization and apply the parameters to time synchronization, brightness synchronization, volume synchronization and environment monitoring data synchronization and enable or disable

The Taurus products that support RF management include the T3, T6, TB3, TB4, TB6, and TB8.

Before using RF synchronization, install an RF module. ViPlex Express can detect and display RF module status.


- Step 1 Choose **Terminal Control > RF management**.
- Step 2 Select the target terminal from the terminal list.
- Step 3 Turn on RF synchronization.
- Step 4 Set the current terminal as the master device or a slave device.
- Step 5 Set a group ID.

Enter the group ID of the master device for a slave device, and this slave device and the master device will be grouped.

- Step 6 Select the options that require RF synchronization.

After RF synchronization is applied, the time, brightness, volume, and environment monitoring data of the slave device will keep the same as the master device via the RF signal.

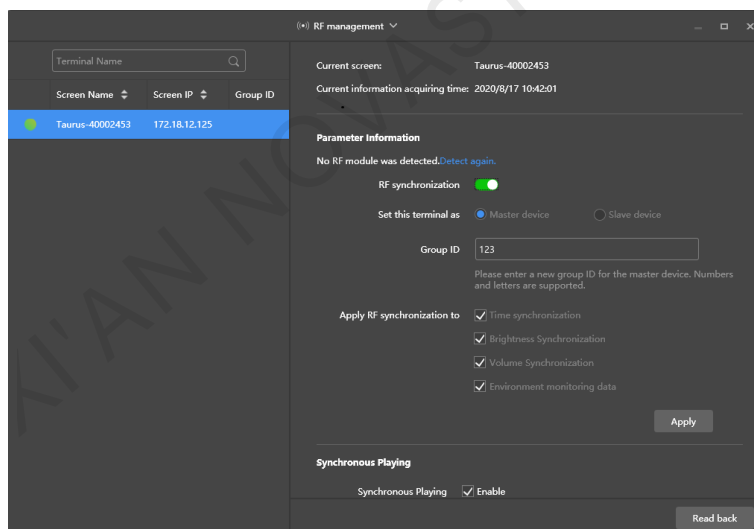Figure 4-49 RF management



- Step 7 Click **Apply**.

4.16 Sensor

If a sensor is connected to the terminal, the user needs to connect to the sensor logically in ViPlex Express to enable the terminal to collect environment monitoring data.

When the related information of RF synchronization is displayed, as shown in [Figure 4-50](#), it indicates that environment monitoring data synchronization is enabled on the current terminal. For related operations, see [4.15 RF Management](#). RF synchronization requires users to specify a master device and slave devices. Users need to set the sensors of the master device only and the monitoring data of the slave devices will be the same as the master device via RF signal.

Figure 4-50 RF synchronization- environment monitoring data

Step 1 Choose **Terminal Control > Sensor**.

Step 2 Select the target terminal from the terminal list.

Step 3 Select a sensor manufacturer. Sensors of only NovaStar, Nenghui and Jingxun Changtong are supported.

Step 4 Select a sensor type.

- NovaStar: Brightness, temperature
- Nenghui: Air temperature, air humidity, air pressure, wind direction, CO₂, wind speed, PM2.5, PM10, noise, brightness
- Jingxun Changtong: Wind direction, wind speed, PM2.5, PM10, air pressure, air temperature, air humidity, noise, brightness

Figure 4-51 Sensor types

Step 5 After the configuration is done, click **Apply**.

4.17 Screen Information


The information displayed here includes the terminal MAC address, terminal IP address, system software version, product model, application software version.

Step 1 Choose **Terminal Control > Screen information**.

Step 2 Select the target terminal from the terminal list.

Step 3 View the terminal information

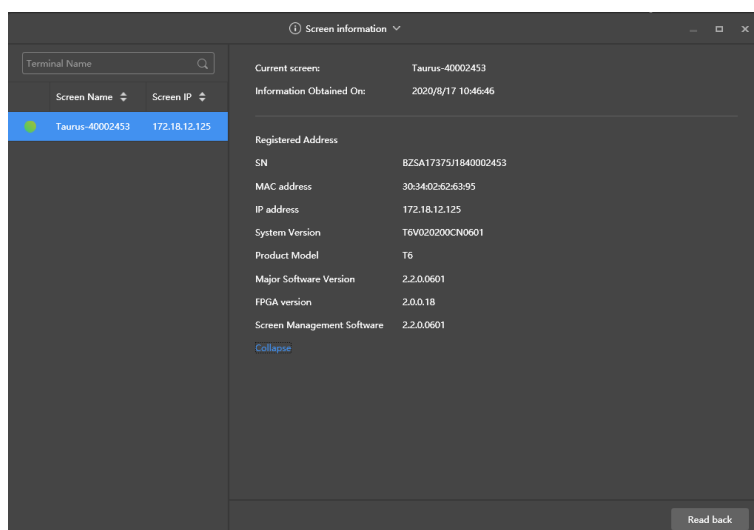Figure 4-52 Terminal information



5 System Settings

At the top right of the page, click  and select the required menu.

Table 5-1 System settings

Menu	Description
Language	Set system language.
Working Mode	Select working mode including studio mode and async mode.
RF management	Manage the playback of all terminals except the reference device when the RF time synchronization mode is enabled. Before the operation, enter the password "admin".
Custom server	Add, modify, or delete custom servers. Users can choose customized servers on the pages of connecting to cloud publishing and monitoring services and the page of setting NTP synchronization.
Preferences	<ul style="list-style-type: none">Set the location to save files, including ViPlex Express configuration files, data, temporary files, etc.Specify FTP library version to improve the network adaptability of ViPlex Express.Enable or disable the automatic terminal reconnection function, and set the reconnection interval.
Check for Updates	Check for and install new updates of ViPlex Express.
Help	View the documentation related to the software.
About	Display the version of ViPlex Express and the official website of NovaStar.

6 Audio and Video Decoder Specifications

6.1 Image

Type	Codec	Supported Image Size	Container	Remarks
JPEG	JFIF file format 1.02	48x48 pixels~8176x8176 pixels	JPG, JPEG	Not Support Non-interleaved Scan Software support SRGB JPEG Software support Adobe RGB JPEG
BMP	BMP	No Restriction	BMP	N/A
GIF	GIF	No Restriction	GIF	N/A
PNG	PNG	No Restriction	PNG	N/A
WEBP	WEBP	No Restriction	WEBP	N/A

6.2 Audio

Type	Codec	Channel	Bit rate	Sampling rate	File Format	Remarks
MPEG	MPEG1/2/2.5 Audio Layer1/2/3	2	8kbps~320Kbps , CBR and VBR	8KHZ~48K Hz	MP1, MP2, MP3	N/A
Windows Media Audio	WMA Version 4, 4.1, 7, 8, 9, wmapro	2	8kbps~320Kbps	8KHZ~48K Hz	WMA	Non-support WMA Pro, lossless and MBR
WAV	MS-ADPCM, IMA-ADPCM, PCM	2	N/A	8KHZ~48K Hz	WAV	Support 4bit MS-ADPCM, IMA-ADPCM
OGG	Q1~Q10	2	N/A	8KHZ~48K Hz	OGG, OGA	N/A
FLAC	Compress Level 0~8	2	N/A	8KHZ~48K Hz	FLAC	N/A
AAC	ADIF, ATDS Header and AAC-LC and AAC-HE, AAC-ELD	5.1	N/A	8KHZ~48K Hz	AAC, M4A	N/A
AMR	AMR-NB, AMR-WB	1	AMR-NB 4.75~12.2kbps @8kHz AMR-WB 6.60~23.85kbps @16kHz	8KHZ, 16KHZ	3GP	N/A
MIDI	MIDI Type 0 and 1, DLS version 1 and 2, XMF and Mobile XMF, RTTTL/RTX, OTA, iMelody	2	N/A	N/A	XMF, MXMF, RTTTL, RTX, OTA, IMY	N/A

6.3 Video

Type	Codec	Supported Image Size	Maximum Frame Rate	Maximum Bit Rate (Ideal Case)	File Format	Remarks
MPEG-1/2	MPEG-1/2	48x48 pixels~1920x1080 pixels	30fps	80Mbps	DAT, MPG, VOB, TS	Support Field Coding
MPEG-4	MPEG4	48x48 pixels~1920x1080 pixels	30fps	38.4Mbps	AVI, MKV, MP4, MOV, 3GP	Not support MS MPEG4 v1/v2/v3, GMC, DivX3/4/5/6/7 .../10
H.264/AVC	H.264	T3&T6&TB3&TB4&TB6&TB8: 48x48 pixels~4096x2304 pixels Other models: 48x48 pixels~1920x1080 pixels	T3&T6&TB3&TB4&TB6&TB8: 4K@25fps, 1080P@60fps Other models: 1080P@60fps	T3&T6&TB3&TB4&TB6&TB8: 100Mbps Other models: 57.2Mbps	AVI, MKV, MP4, MOV, 3GP, TS, FLV	Support Field Coding, MBAFF
MVC	H.264 MVC	48x48 pixels~1920x1080 pixels	60fps	38.4Mbps	MKV, TS	Support Stereo High Profile only
H.265/HEVC	H.265/HEVC	T3&T6&TB3&TB4&TB6&TB8: 64x64 pixels~4096x2304 pixels Other models: 64x64 pixels~1920x1080 pixels	T3&T6&TB3&TB4&TB6&TB8: 4K@60fps, 1080P@60fps Other models: 1080P@60fps	T3&T6&TB3&TB4&TB6&TB8: 100Mbps Other models: 57.2Mbps	MKV, MP4, MOV, TS	Support Main Profile, Tile & Slice
GOOGLE VP8	VP8	48x48 pixels~1920x1080 pixels	30fps	38.4 Mbps	WEBM, MKV	N/A
H.263	H.263	SQCIF(128x96), QCIF(176x144), CIF(352x288), 4CIF(704x576)	30fps	38.4Mbps	3GP, MOV, MP4	Not support H.263+
VC-1	VC-1	48x48 pixels~1920x1080 pixels	30fps	45Mbps	WMV, ASF, TS, MKV, AVI	N/A
MOTION JPEG	MJPEG	48x48 pixels~1920x1080 pixels	30fps	38.4Mbps	AVI	N/A

Note: Output data format is YUV420 semi-planar, and YUV400(monochrome) is also supported for H.264.

7 Limitations on Cut-to-Display Windows for Regular Screens

Product	TB4, TB6, TB8	TB1-4G (Optional 4G), TB2-4G (Optional 4G)
Recommended screen resolution (width x height)	4096 x 288	1920 x 1080
Number of parts	Cut horizontally: Actual screen width/Playback window width ≤8	

Cut vertically: Actual screen height/Playback window height ≤ 8

8 Limitations on Playback Parameters for Ultra-long Screens

Product	TB4, TB6, TB8	TB1-4G (Optional 4G), TB2-4G (Optional 4G)
Recommended screen resolution (width x height)	4096x288	1920x1080
Maximum picture resolution	The total number of pixels cannot exceed the screen resolution.	The total number of pixels cannot exceed the screen resolution.
Number of videos (resolution x number)	Number of videos that can be played simultaneously: (Choose one from the following 4 options) 4K x 1 1080P x 2 720P x 4 (480x45) x 6	Number of videos that can be played simultaneously: (Choose one from the following 3 options) 1080P x 1 720P x 2 (480x45) x 4
Scrolling text	Maximum font size: 24 px Maximum number of characters: 2000	Maximum font size: 24 px Maximum number of characters: 2000

Copyright © 2021 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

Trademark

 is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

| [Official website](http://www.novastar.tech)
| www.novastar.tech

| [Technical support](mailto:support@novastar.tech)
| support@novastar.tech